
FusionServer 2258H V7 Server

Technical White Paper

Issue 02

Date 2024-07-11

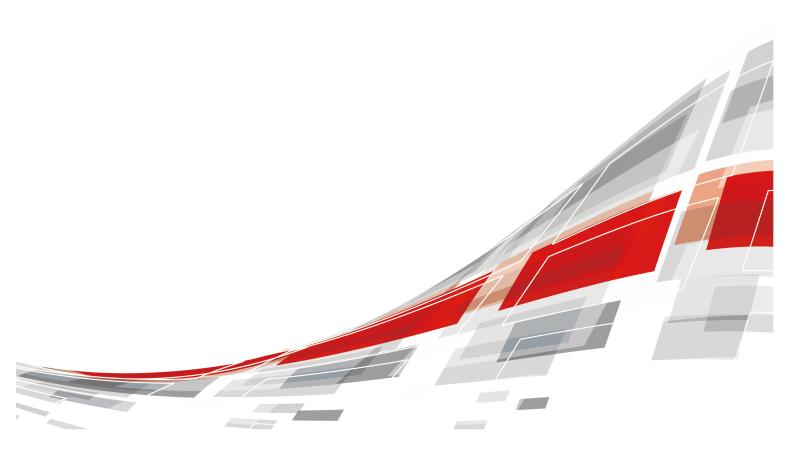

Copyright © xFusion Digital Technologies Co., Ltd. 2024. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of xFusion Digital Technologies Co., Ltd.

Trademarks and Permissions

CFUSION and other xFusion trademarks are trademarks of xFusion Digital Technologies Co., Ltd. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

In this document, "xFusion" is used to refer to "xFusion Digital Technologies Co., Ltd." for concise description and easy understanding, which does not mean that "xFusion" may have any other meaning. Any "xFusion" mentioned or described hereof may not be understood as any meaning other than "xFusion Digital Technologies Co., Ltd.", and xFusion Digital Technologies Co., Ltd. shall not bear any liability resulting from the use of "xFusion".

The purchased products, services and features are stipulated by the contract made between xFusion and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

xFusion Digital Technologies Co., Ltd.

Address: 9th Floor, Building 1, Zensun Boya Square, Longzihu Wisdom Island

Zhengdong New District 450046 Zhengzhou, Henan Province People's Republic of China

Website: https://www.xfusion.com

About This Document

Purpose

This document describes the appearance, features, performance parameters, and hardware and software compatibility of FusionServer 2258H V7, so that users can have an in-depth and detailed understanding of FusionServer 2258H V7.

Intended Audience

This document is intended for pre-sales engineers.

Symbolic Conventions

The symbols that may be found in this document are defined as follows:

Symbol	Description	
▲ DANGER	Indicates a hazard with a high level of risk which, if not avoided, could result in death or serious injury.	
<u></u> ⚠ WARNING	Indicates a hazard with a medium risk which, if not avoided, could result in death or serious injury.	
⚠ CAUTION	Indicates a low-level hazard which, if not avoided, could result in minor or moderate injury.	
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in device damage, data loss, device performance degradation, or other unpredictable results. NOTICE is used to address practices not related to personal injury.	
NOTE	Supplements the important information in the main text. NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.	

Change History

Issue	Date	Description	
02	2024-07-11	Updated 5.2.2 Indicators and Buttons and 6.2 Environmental specifications.	
01	2024-06-17	This issue is the first official release.	

Contents

About This Document	i
1 Overview	1
2 Features	2
3 Physical Structure	5
4 Logical structure	6
5 Hardware Description	7
5.1 Front Panel	
5.1.1 Appearance	
5.1.2 Indicators and Buttons	
5.1.3 Port	
5.2 Rear Panel	12
5.2.1 Appearance	12
5.2.2 Indicators and Buttons	13
5.2.3 Port	14
5.3 Processor	16
5.4 Memory module	17
5.4.1 DDR5 DIMMs	17
5.4.1.1 Memory Identifier	17
5.4.1.2 Memory Subsystem Architecture	18
5.4.1.3 Memory Compatibility	19
5.4.1.4 Memory Module Installation Rules	21
5.4.1.5 Positions of memory modules	21
5.4.1.6 Memory Protection Technologies	23
5.5 Storage	24
5.5.1 Drive Configuration and Drive Numbering	24
5.5.1.1 12 x 2.5" drive pass-through configuration	24
5.5.2 Drive Indicators	28
5.5.3 RAID Controller Cards	29
5.6 Network	29
5.6.1 OCP 3.0 NIC	30
5.7 I/O Expansion	30

5.7.1 PCle Cards	30
5.7.2 PCIe slots	30
5.7.3 PCIe slot description	32
5.8 PSU	34
5.9 Fan Modules	34
5.10 Boards	35
5.10.1 Mainboard	36
5.10.2 Drive backplane	38
5.10.3 Fan board	39
5.10.4 M.2 adapter board	40
5.10.5 GPU Built-in Adapter Board	40
6 Product Specifications	42
6.1 Technical specifications	42
6.2 Environmental specifications	46
6.3 Physical specifications	48
7 Software and Hardware Compatibility	50
8 Safety Instructions	51
8.1 Security	51
8.2 Maintenance and Warranty	54
9 System Management	56
10 Certifications	
11 Waste Product Recycling	
A Appendix	
A.1 Chassis Label Information	
A.1.1 Chassis Head Label	
A.1.1 Nameplate	
A.1.1.2 Certificate	
A.1.1.3 Quick Access Label	
A.1.2 Chassis Internal Label	
A.1.3 Chassis Tail Label	
A.2 Product SN	
A.3 Operating Temperature Limitations	
A.4 Nameplate	
A.5 RAS Features	
A.6 Sensor List.	
B Glossary	77
B.1 A-E	77
B.2 F-J	78
B.3 K-O	78

B.4 P-T	78
B.5 U-Z	
C Acronyms and Abbreviations	80
C.1 A-E	80
C.2 F-J	
C.3 K-O	82
C.4 P-T	83
C.5 U-Z (AMD)	85

1 Overview

FusionServer 2258H V7 (2258H V7) is a new-generation 2U 2-socket rack server designed for the Internet, Internet Data Center (IDC), cloud computing, enterprise business, and telecom.

The 2258H V7 server is ideal for IT core services, cloud computing, virtualization, high-performance computing, distributed storage, big data processing, enterprise or telecom applications, and other complex workloads.

This product features low power consumption, high scalability, high reliability, and easy management and deployment.

◯ NOTE

For details about the server nameplate, see **A.4 Nameplate**.

Figure 1-1 Server appearance



2 Features

Performance

- The server supports the new generation of AMD EPYCTM 9004 series processors (Genoa). A processor provides up to 96 cores and 192 threads, up to 400 W TDP, a maximum of 4.4 GHz turbo frequency, 1 MB L2 cache and 32 MB L3 cache (shared by eight cores), and four groups of 32 GT/s xGMI links between the processors, which deliver supreme processing performance.
- The server supports a maximum of 24 DDR5 4800 MT/s registered dual-inline memory modules (RDIMMs), delivering up to 6 TB total memory capacity (calculated using the maximum capacity of a single memory module: 256 GB). The memory modules feature high speed and availability.

Scalability

- Flexible drive configurations cater to a variety of business requirements and ensure high elasticity and scalability of storage resources.
- Supports up to 12 x 2.5 inches on the front.
- Up to 4 x 2.5" or 4 x 3.5" NVMe U.2 drives, improving storage density and I/O performance.
- Supports four FHFL dual-width GPUs.
- Supports one FLEX I/O card (adaptive to OCP 3.0 NICs), PCle 4.0 x 16 bandwidth, and GE/10GE/25GE/100GE NICs.
- The server supports two SATA/M.2 SSDs, enabling quick start of OS drives and improving maintenance flexibility.

Availability and Serviceability

- Carrier-class components with process expertise ensure high system reliability and availability.
- The server uses hot-swappable SAS/SATA drives. SAS/SATA drives support RAID 0, 1, 1E, 10, 5, 50, 6, and 60, depending on the RAID controller card used. It also uses a supercapacitor to protect the RAID cache data against power failures.
- The panel provides a UID/Healthy LED indicator and a fault diagnosis LED. The iBMC Web management interface provides key component status. The iBMC web management interface helps technical personnel quickly find faulty

- components or the components with risk of faults, simplifying maintenance, speeding up troubleshooting, and improving system availability.
- The mounting ear provides the iBMC direct connect management port to support local iBMC O&M, improving O&M efficiency.
- A server provides two hot-swappable PSUs in 1+1 redundancy mode and four hot-swappable fan modules in N+1 redundancy mode, improving system availability.
- The intelligent Baseboard Management Controller (iBMC) can continuously monitor system parameters, trigger alarms, and take recovery measures to minimize shutdown.

Manageability and Security

- The built-in iBMC monitors server operating status and provides remote management.
- Supports BIOS menu passwords to ensure the security of system startup and system management.
- Supports the Network Controller Sideband Interface (NC-SI) feature that allows
 a network port to provide functions of both a management network port and a
 service network port. The NC-SI feature can be enabled or disabled through the
 iBMC or BIOS. The NC-SI feature is disabled by default.

The service network port of the NC-SI feature supports the following configurations:


- It can be bound to any network port of the server's OCP 3.0 NIC or other standard PCIe NICs that support the NC-SI function.
- It allows users to enable or disable the virtual local area network ID (VLAN ID) and configure the VLAN ID. The VLAN ID is **0** and disabled by default.
- It supports IPv4 and IPv6 addresses, and allows users to configure the IP address, subnet mask, default gateway, or prefix length of an IPv6 address.
- The integrated Unified Extensible Firmware Interface (UEFI) improves setup, configuration, and update efficiency and simplifies fault clearance.
- Supports the lockable server front bezel to ensure local data security.
- Supports chassis cover opening detection to enhance physical security.
- Supports secure boot based on the chip-level Root of Trust (RoT) and provides
 the level-by-level verification function starting from the hardware trusted root,
 building a complete secure boot chain.
- Supports the trusted platform module (TPM) and trusted password module (TCM) to provide advanced encryption functions, such as digital signature and remote authentication.
- Meets the following requirements in NIST SP 800-147B:
 - The BIOS firmware digital signature update mechanism is supported. During the upgrade, the digital signature is verified to prevent unauthorized BIOS firmware upgrade.
 - The flash security protection mechanism is supported to prevent unauthorized modification of the flash in the OS.

Energy Efficiency

- Provides 80 Plus Platinum/Titanium PSUs with different energy efficiency levels. The efficiency of the PSUs reaches 96% when the load is 50%.
- Supports active/standby power supply and high-voltage DC power supply to improve the efficiency of the power supply system.
- Efficient Voltage Regulator Down (VRD) power supplies for boards minimize the energy loss from DC/DC power conversion.
- Area-based Proportional-Integral-Derivative (PID) intelligent fan speed adjustment and intelligent CPU frequency scaling optimize heat dissipation and reduce overall system power consumption.
- The improved thermal design with energy-efficient fans ensures optimal heat dissipation and reduces system power consumption.
- The server is protected with power capping and power control measures.
- Staggered spinup of drives reduces the server boot power consumption.

3 Physical Structure


Figure 3-1 Physical structure

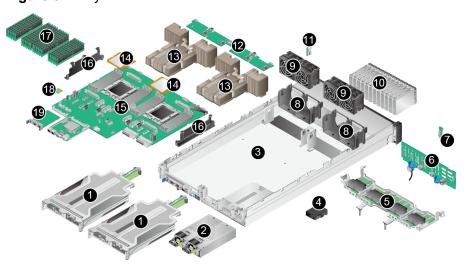

1	GPU module	2	PSUs
3	Chassis	4	Supercapacitor holder
5	GPU tray	6	Front drive backplane
7	Left mounting ear plate	8	Fan module bracket
9	Fan modules	10	Front drives
11	Right mounting ear plate	12	Fan board
13	Processor heat sinks	14	Processor
15	Mainboard	16	Cable management arm
17	Memory modules	18	TPM/TCM
19	OCP 3.0 NIC	-	-

4 Logical structure

Figure 4-1 Logical structure

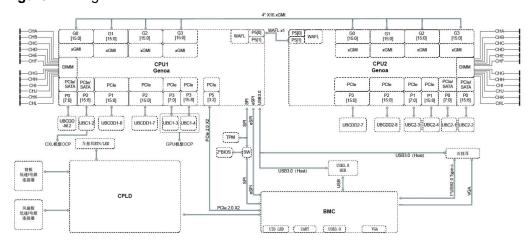

- The server supports one or two next-generation AMD EPYCTM processors (Genoa). It supports 24 DDR5 DIMMs. The processors interconnect with each other through four xGMI links at a speed of up to 32 GT/s.
- The PCIe bus resources of the processor are connected to the PCIe riser card through PCBs or cables. Different PCIe riser cards support PCIe slots of different specifications. The server supports one OCP 3.0 NIC. The PCIe slot bandwidth is x8 by default and is scalable to x16. The server supports Socket-Direct 2x8 OCP configuration.
- The BMC card integrates the BMC management chip and provides external video graphic array (VGA), management network port, and serial port.

5 Hardware Description

- 5.1 Front Panel
- 5.2 Rear Panel
- 5.3 Processor
- 5.4 Memory module
- 5.5 Storage
- 5.6 Network
- 5.7 I/O Expansion
- 5.8 **PSU**
- 5.9 Fan Modules
- 5.10 Boards

5.1 Front Panel

5.1.1 Appearance

• 12 x 2.5" drive configuration

Figure 5-1 Front view



\[\frac{1}{2}\]	1	Drive	2	Slide-out label plate (with
				an SN label)

5.1.2 Indicators and Buttons

Positions of Indicators and Buttons

• 12 x 2.5" drive configuration

Figure 5-2 Indicators and buttons on the front panel



1	UID button/indicator	2	Health status indicator
3	Power button/indicator	4	Fault diagnosis LED
5	FlexIO card presence indicator	6	iBMC direct connect management port indicator

Indicators and Buttons

Table 5-1 Description of indicators and buttons on the front panel

Silkscreen	Indicators and Buttons	Description
888	Fault diagnosis LED	 : The device is operating properly. Error code: A component is faulty. NOTE If multiple error codes are generated at the same time, the error codes are displayed in a loop. Each error code is displayed for 5 seconds. For details about fault codes, see the iBMC Alarm Handling.

Silkscreen	Indicators and Buttons	Description	
	Health status indicator	 Off: The device is powered off or faulty. Blinking red at 1 Hz: A major alarm has been generated on the system. Blinking red at 5 Hz: A critical alarm has been generated on the system. Steady green: The device is operating properly. 	
**	FlexIO card presence indicator	 Indicates whether the FlexIO card is detected. Off: The FlexIO card is not detected. Blinking green at 0.5 Hz: The FlexIO card is detected but is not powered on. Blinking green at 2 Hz: The FlexIO card is detected and has just been inserted. Steady green: The FlexIO card is detected and the power supply is normal. 	
<u>ර</u>	Power button/indicator	 Off: The device is powered off. Steady green: The device is powered on. Blinking yellow: The iBMC is starting. The power button is locked and cannot be pressed. The iBMC is started in about 1 minute, and then the power indicator is steady yellow. Steady yellow: The device is in the standby state. Power button: When the device is powered on, you can press this button to gracefully shut down the OS. NOTE For different OSs, you may need to shut down the OS as prompted. When the device is powered on, you can hold down this button for 6 seconds to forcibly power off the device. When the power indicator is steady yellow, you can press this button to power on the device. 	

Silkscreen	Indicators and Buttons	Description	
	UID button/ indicator	 The UID button/indicator helps identify and locate a device. UID indicator: Off: The device is not being located. Blinking or steady blue: The device is being located. UID button: You can control the UID indicator status by pressing the UID button or using the iBMC. You can press this button to turn on or off the UID indicator. You can press and hold down this button for 4 to 6 seconds to reset the iBMC. 	
	iBMC direct connect management port indicator	 Indicates the status when the iBMC direct connect management port connects to a terminal (local PC or Android mobile phone): Off: No terminal is connected. Blinking green at short intervals for 3 seconds and then off: The port is disabled. Steady green: The terminal is connected. Indicates the status when the iBMC direct connect management port connects to a USB device: Blinking red at long intervals: The job fails or an error is reported when the job is complete. Blinking green at short intervals: The job is being executed. Blinking green at short intervals for 3 seconds and then off: The port is disabled. Steady green: The server configuration file is being copied from the USB device or the job is successfully completed. 	

5.1.3 Port

Port Positions

• 12 x 2.5" drive configuration

Figure 5-3 Ports on the front panel



1	USB 3.0 ports	2	iBMC direct connect management port
3	VGA port	-	-

Port Description

Table 5-2 Ports on the front panel

Name	Туре	Quantity ^{Note}	Description
VGA port	DB15	1	Used to connect a display terminal, such as a monitor or KVM.
iBMC direct connect management port	USB Type-C NOTE The USB 2.0 protocol is supported.	1	Used to connect to a local PC or mobile phone using a USB Type-C cable to monitor and manage the system. NOTE Only local PCs running Windows 10 and mobile phones running Android are supported. • To log in to the iBMC from a local PC, enter https://IIP address of the iBMC management network port in the address box of the browser on the local PC. • When accessing the iBMC through a mobile phone, you need to use the mobile application FusionMobile. For details, see the FusionMobile User Guide.

Name	Туре	Quantity ^{Note}	Description
USB port	USB 3.0	2	Used to connect to a USB 3.0 device. NOTICE
			 Before connecting an external USB device, ensure that the USB device functions properly; otherwise, it may adversely impact the server.
			The USB 3.0 port can be used to supply power to low-power peripherals. However, the USB 3.0 port must comply with the USB specifications. To run advanced peripherals, such as external CD/DVD drives, an external power supply is required.

Note: The number of ports varies depending on server configuration. This table lists the maximum number of ports in different configurations.

5.2 Rear Panel

5.2.1 Appearance

GPU model

1	Slot 1	2	Slot 4
3	Slot 7	4	Slot 9
5	PSU 2	6	PSU 1

7	Slot 6	8	(Optional) FlexIO card 1
			NOTE The FlexIO card slots support only OCP 3.0 NICs.

◯ NOTE

- For details about OCP 3.0 NICs, see 5.6.1 OCP 3.0 NIC.
- This figure is for reference only. The actual configuration may vary.

5.2.2 Indicators and Buttons

Indicator Positions

Figure 5-5 Indicators on the rear panel



1	Data transmission status indicator of the management network port	2	Connection status indicator of the management network port
3	Serial port indicators NOTE Reserved and unavailable currently	4	UID indicator
5	PSU indicators	-	-

Indicator Description

Table 5-3 Indicators on the rear panel

Silkscreen	Indicator	Description
-	Data transmission status indicator of the management network port	 Off: No data is being transmitted. Blinking yellow: Data is being transmitted.


Silkscreen	Indicator	Description
-	Connection status indicator of the management network port	 Off: The network is not connected. Steady green: The network port is properly connected.
_	PSU indicators	 Off: No power is supplied. Blinking green at 1 Hz: — The input is normal and the power supply enters SV12 mode. — The input is overvoltage or undervoltage. — The PSU is in deep hibernation mode. Blinking green at 4 Hz: The firmware is being upgraded online. Steady green: The input and output are normal. Steady orange: The input is normal but there is no output. NOTE The possible causes of no output are as follows: Power supply overtemperature protection Power output overcurrent or short-circuit Output overvoltage Short-circuit protection Device failure (excluding failure of all devices)
	UID indicator	 The UID indicator helps identify and locate a device. Off: The device is not being located. Blinking or steady blue: The device is being located. NOTE You can control the UID indicator status by pressing the UID button or using the iBMC.

5.2.3 Port

Port Positions

GPU model

Figure 5-6 Ports on the rear panel

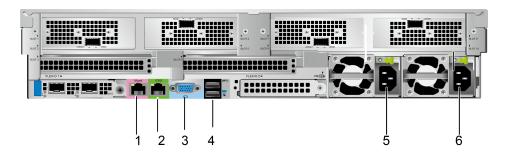

1	Management network port	2	Serial port
3	VGA port	4	USB 3.0 ports
5	Socket of PSU 1	6	Socket of PSU 2

Port Description

Table 5-4 Ports on the rear panel

Name	Туре	Quantity	Description
Management network port	RJ45	1	iBMC management network port, which is used to manage the server.
			NOTE
			The management network port is a GE port that supports 100 Mbit/s and 1000 Mbit/s auto- negotiation.
			The iBMC management network port cannot be connected to a PoE-powered device (such as a PoE switch with the PoE function enabled). Forcible interconnection may cause link communication problems or damage to the management network port.
Serial port	RJ45	1	A port used for debugging. By default, it serves as the OS serial port. You can also set it as the iBMC serial port on the iBMC CLI.
			NOTE The port is a 3-wire serial communication port, and its default baud rate is 115,200 bit/s.

Name	Туре	Quantity	Description
VGA port	DB15	1	Used to connect a display terminal, such as a monitor or KVM.
USB port	USB 3.0	2	Used to connect to a USB 3.0 device. NOTICE The maximum current is 1.3 A for an external USB device. Before connecting an external USB device, ensure that the USB device functions properly; otherwise, it may adversely impact the server. The USB 3.0 port can be used to supply power to low-power peripherals. However, the USB 3.0 port must comply with the USB specifications. To run advanced peripherals, such as
			external CD/DVD drives, an external power supply is required.
PSU socket	-	2	Used to connect to a power distribution unit (PDU) through a power cable. You can select the PSUs as required.
			When determining the PSUs, ensure that the rated power of the PSUs is greater than that of the server.

5.3 Processor

- The server supports one or two processors.
- If only one processor is required, install it in socket CPU 1.
- Processors of the same model must be used in a server.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.

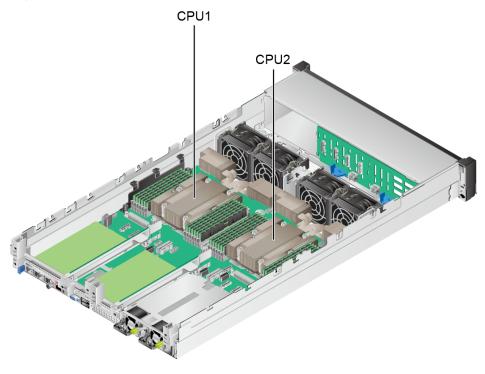



Figure 5-7 Positions of the processors

5.4 Memory module

5.4.1 DDR5 DIMMs

5.4.1.1 Memory Identifier

You can determine the memory module properties based on the label attached to the memory module.

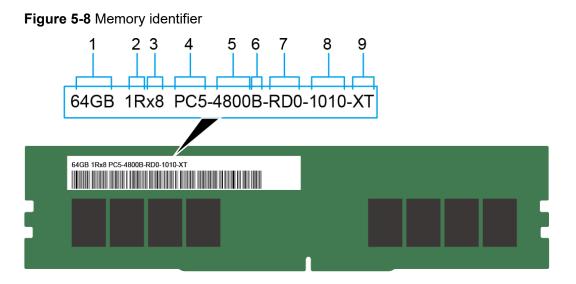

Description	Example
Capacity	 16 GB 32 GB 64 GB 96 GB 128 GB
rank(s)	 1R = Single rank 2R = Dual rank 4R = Quad rank 8R = Octal rank
Data width on the DRAM	x4: 4-bitx8: 8-bit
Type of the memory interface	• PC5 = DDR5
Maximum memory speed	• 4800MT/S
Memory delay parameter (CL-nRCD-nRP)	 A = 34-34-34 B = 40-40-40 C = 42-42-42
DIMM type	RD0: reference design for version RDIMM D0
SPD version	10: SPD version10: SPD versions from Byte 192 to Byte 447
Temperature class	 Extended temperature grade (XT): 0°C to 95°C (32°F to 203°F) Normal temperature grade (NT): 0°C to 85°C (32°F to 185°F)
	Capacity rank(s) Data width on the DRAM Type of the memory interface Maximum memory speed Memory delay parameter (CL-nRCD-nRP) DIMM type SPD version

5.4.1.2 Memory Subsystem Architecture

The server provides 24 memory slots. Each processor integrates 12 memory channels.

Table 5-5 DIMM channels (DIMM slots on mainboard)

СРИ	Channel	Memory Slot
CPU1	DIMMA	DIMM000(A)
	DIMMB	DIMM010(B)

CPU	Channel	Memory Slot
	DIMMC	DIMM020(C)
	DIMMD	DIMM030(D)
	DIMME	DIMM040(E)
	DIMMF	DIMM050(F)
	DIMMG	DIMM060(G)
	DIMMH	DIMM070(H)
	DIMMI	DIMM080(I)
	DIMMJ	DIMM090(J)
	DIMMK	DIMM0A0(K)
	DIMML	DIMM0B0(L)
CPU2	DIMMA	DIMM100(A)
	DIMMB	DIMM110(B)
	DIMMC	DIMM120(C)
	DIMMD	DIMM130(D)
	DIMME	DIMM140(E)
	DIMMF	DIMM150(F)
	DIMMG	DIMM160(G)
	DIMMH	DIMM170(H)
	DIMMI	DIMM180(I)
	DIMMJ	DIMM190(J)
	DIMMK	DIMM1A0(K)
	DIMML	DIMM1B0(L)

5.4.1.3 Memory Compatibility

Observe the following rules when configuring DDR5 memory modules:

NOTICE

- A server must use DDR5 memory modules of the same part number (P/N code), and the memory speed is the lower one of the following two speed values:
 - Memory speed supported by a CPU
 - Maximum operating speed of a memory module
- The DDR5 memory modules of different types (RDIMM and RDIMM-3DS) and specifications (capacity, bit width, rank, and height) cannot be used together.
- For details about the optional components, consult the local sales representative.
- The memory module can be used with the 4th-generation AMD EPYCTM Genoa processors. The maximum memory capacity supported by all processor models is the same.
- The calculation formula of total memory capacity supported is as follows: the total memory capacity equals the capacity sum of all DDR5 memory modules.
- For details about the type of a single memory module, consult your local sales representatives or see "Search Parts" in the compatibility list on the technical support website.
- The maximum number of memory modules supported depends on the memory module type and number of ranks.

Table 5-6 DDR5 memory parameters

Parameter	r Specifications					
Capacity po		16	32	64	96	128
Туре		RDIMM	RDIMM	RDIMM	RDIMM	RDIMM-3 DS
Rated spee	ed (MT/s)	4800	4800	4800	4800	4800
Operating voltage (V)		1.1	1.1	1.1	1.1	1.1
Maximum r DDR5 DIM server ^a		40	40	40	40	40
Maximum I memory ca server (GB	pacity of a	640	1280	2560	3840	5120
Actual speed (MT/s)	1DPC ^b	4800	4800	4800	4800	4800

Parameter Specifications

- a: The maximum number of DDR5 memory modules is based on dualprocessor configuration. The number is halved for a server with only one processor.
- b: DIMM per channel (DPC) indicates the number of memory modules per channel
- The information listed in this table is for reference only. For details, consult the local sales representatives.

5.4.1.4 Memory Module Installation Rules

Observe the following rules when configuring DDR5 memory modules:

- At least one DDR5 memory module must be configured for an AMD Genoa CPU.
- The memory modules configured must be DDR5 RDIMMs.
- The memory modules must be configured with the same number of ranks.
- Install filler memory modules in vacant slots.

5.4.1.5 Positions of memory modules

The server supports up to 24 DDR5 memory modules. To maximize memory performance, you are advised to use balanced memory configuration.

Observe the memory module installation rules when configuring memory modules. For details, see the memory configuration guide on the technical support website.

Figure 5-9 Positions of the memory modules



Table 5-7 DDR5 memory modules installation guidelines (positions of the memory modules)

Proc	Chan	DIMM	Numbe	er of DIM	1Ms				
essor	nel	Slot	2	4	8	12	16	20	24
CPU1	DIMM A	DIMM 000(A)	•	•	•	•	•	•	•
	DIMM B	DIMM 010(B)	X	X	X	•	•	•	•
	DIMM C	DIMM 020(C)	Х	X	•	•	•	•	•
	DIMM D	DIMM 030(D)	Х	Х	Х	X	X	•	•
	DIMM E	DIMM 040(E)	Х	Х	Х	Х	•	•	•
	DIMM F	DIMM 050(F)	Х	Х	Х	Х	Х	Х	•
	DIMM G	DIMM 060(G)	Х	•	•	•	•	•	•
	DIMM H	DIMM 070(H)	Х	Х	Х	•	•	•	•
	DIMM I	DIMM 080(I)	Х	Х	•	•	•	•	•
	DIMM J	DIMM 090(J)	Х	Х	Х	Х	Х	•	•
	DIMM K	DIMM 0A0(K)	Х	Х	Х	Х	•	•	•
	DIMM L	DIMM 0B0(L)	Х	Х	Х	Х	Х	Х	•
CPU2	DIMM A	DIMM 100(A)	•	•	•	•	•	•	•

	DIMM B	DIMM 110(B)	Х	Х	Х	•	•	•	•
	DIMM C	DIMM 120(C	X	Х	•	•	•	•	•
-	DIMM D	DIMM 130(D)	Х	Х	Х	Х	Х	•	•
	DIMM E	DIMM 140(E)	X	Х	Х	Х	•	•	•
	DIMM F	DIMM 150(F)	X	Х	Х	Х	Х	Х	•
	DIMM G	DIMM 160(G)	X	•	•	•	•	•	•
	DIMM H	DIMM 170(H)	X	X	X	•	•	•	•
	DIMM I	DIMM 180(I)	X	Х	•	•	•	•	•
-	DIMM J	DIMM 190(J)	X	Х	Х	Х	Х	•	•
	DIMM K	DIMM 1A0(K)	X	Х	Х	Х	•	•	•
	DIMM L	DIMM 1B0(L)	Х	Х	Х	Х	Х	Х	•

Note: ● indicates an installation position, and X indicates an empty slot.

5.4.1.6 Memory Protection Technologies

- ECC
- Error Check and Scrub (ECS)
- UECC Retry
- Address/Command Parity with Replay
- Write Data CRC with Replay

- Read Data CRC with Replay
- Patrol Scrubber
- Redirect Scrubber
- Thermal Throttling
- Post-Package Repair

5.5 Storage

5.5.1 Drive Configuration and Drive Numbering

5.5.1.1 12 x 2.5" drive pass-through configuration

Table 5-8 Drive configurations

Configuration	Front Drive	Rear Drive	Drive Management Mode
12 x 2.5" drive (8 x SATA + 4 x NVMe) + 4 GPU configuration 1	 Front drive: 12 x 2.5" Slots 0 to 7 support only SATA drives. Slots 8 to 11 support only NVMe drives. 	-	 SATA drive: CPU pass- through NVMe drive: CPU pass- through
12 x 2.5" drive (8 x SAS/SATA + 4 x NVMe) + 4 GPU configuration 2	 Front drive: 12 x 2.5" Slots 0 to 7 support only SAS/SATA drives. Slots 8 to 11 support only NVMe drives. 	-	SAS/SATA drive: 1 x PCle plugin RAID controller card The PCle plugin RAID controller card is installed in slot 6 by default. NVMe drive: CPU passthrough

Configuration	Front Drive	Rear Drive	Drive Management Mode
12 x 2.5" drive (8 x SAS/SATA + 4 x NVMe) + 4 GPU configuration 3	 Front drive: 12 x 2.5" Slots 0 to 7 support only SAS/SATA drives. Slots 8 to 11 support only NVMe drives. 	-	 SAS/SATA drive: 1 x RAID cable card The RAID control cable card is installed in slot 3 by default. NVMe drive: CPU pass-through

For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.

Drive No.

NOTICE

The drive numbers identified by the RAID controller card vary depending on the cabling of the RAID controller card. This section uses the drive numbers identified by a RAID controller card that adopts the default cabling described in "Internal Cabling" in the server *Maintenance and Service Guide*.

Drive numbering of "12 x 2.5" drive (8 x SATA + 4 x NVMe) + 4 GPU configuration 1" in Table 2 Drive configuration

Figure 5-10 Drive No.



Table 5-9 Drive No.

Drive No.	Drive Number Displayed on the iBMC WebUI
0	0

Drive No.	Drive Number Displayed on the iBMC WebUI
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11

Drive numbering of "12 x 2.5" drive (8 x SATA + 4 x NVMe) + 4 GPU configuration 2" in Table 2 Drive configuration

Figure 5-11 Drive numbering



Table 5-10 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
0	0	0
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
7	7	7
8	8	-
9	9	-
10	10	-
11	11	-

• Drive numbering of "12 x 2.5" drive (8 x SATA + 4 x NVMe) + 4 GPU configuration 3" in **Table 2 Drive configuration**

Figure 5-12 Drive numbering



Table 5-11 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
0	0	0
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	-
9	9	-
10	10	-
11	11	-

5.5.2 Drive Indicators

SAS/SATA Drive Indicators

Figure 5-13 SAS/SATA drive indicators


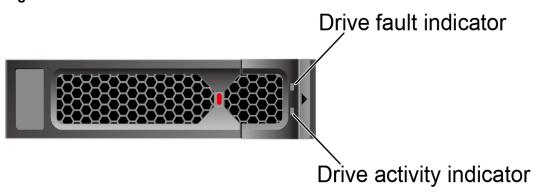


Table 5-12 SAS/SATA drive indicator description

Activity Indicator (Green)	Fault Indicator (Red/Blue)	Description
Off	Off	The drive is not detected.
Steady on	Off	The drive is detected.
Blinking at 4 Hz	Off	Data is being read or written properly, or data on the primary drive is being rebuilt.
Steady on	Blinking blue at 4 Hz	The drive is being located.
Blinking at 1 Hz	Blinking red at 1 Hz synchronously	Data on the secondary drive is being rebuilt.
Off	Red steady on	A drive in a RAID array is removed.
Steady on	Red steady on	The drive is faulty.

NVMe drive indicators

Figure 5-14 NVMe drive indicators

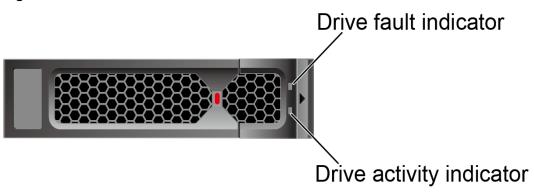

NVMe drives support surprise or orderly hot swap.

Table 5-13 Description of NVMe drive indicators

Active Indicator (Green)	Fault Indicator (Red/Blue)	Description
Off	Off	The NVMe drive is not detected.
Steady on	Off	The NVMe drive is detected and operating properly.
Blinking at 4 Hz	Off	Data is being read from or written to the NVMe drive.
Steady on/blinking	Blinking blue at 4 Hz	The NVMe drive is being located.
Blinking at 1 Hz	Blinking red at 1 Hz synchronously	Data on the NVMe secondary drive is being rebuilt.
Steady on/Off	Red steady on	The NVMe drive is faulty.

5.5.3 RAID Controller Cards

The RAID controller card supports RAID configuration, RAID level migration, and drive roaming.

- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- For details about the RAID controller card, see the server RAID Controller Card User Guide.

5.6 Network

5.6.1 OCP 3.0 NIC

OCP 3.0 NICs provide network expansion capabilities.

- The FlexIO slot supports an OCP 3.0 NIC, which can be configured as required.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- For details about OCP 3.0 NICs, see the OCP 3.0 NIC User Guide.

5.7 I/O Expansion

5.7.1 PCIe Cards

PCIe cards provide ease of expandability and connection.

- Supports up to six PCle expansion slots, one RAID control cable card, four FHFL dual-slot GPUs, and one FHHL standard PCle card.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- When IB cards are used to build an IB network, ensure that the IPoIB modes of the IB cards at both ends of the network connection are the same. For details, contact technical support.

5.7.2 PCle slots

Positions of PCIe Slots

GPU model

Figure 5-15 PCle slots





- The GPU riser module provides slots 1, 4, 7, and 9.
- I/O module 1 provides slot 3. Slot 3 is a dedicated slot for a RAID control cable card.
- I/O module 2 provides slot 6.

PCle Riser Module (GPU Model)

- PCIe Riser Module 4 (Dedicated for GPUs)
 Installed on the GPU built-in adapter board. For details, see 5.10.5 GPU Built-in Adapter Board.
 - Provides PCIe slot 4 when installed in the card slot-4CHP connector (J10).


Provides PCle slot 9 when installed in the card slot-4CHP connector (J12).

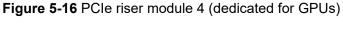

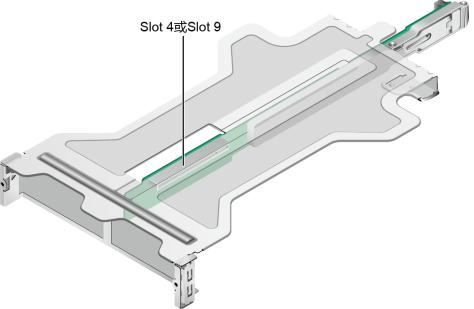


- PCIe riser module 5 (dedicated for GPUs)
 Installed on the GPU built-in adapter board. For details, see 5.10.5 GPU Built-in Adapter Board.
 - Provides PCIe slot 1 when installed in the card slot-4CHP connector (J11).
 - Provides PCIe slot 7 when installed in the card slot-4CHP connector (J13).


Figure 5-17 PCIe riser module 5 (dedicated for GPUs)

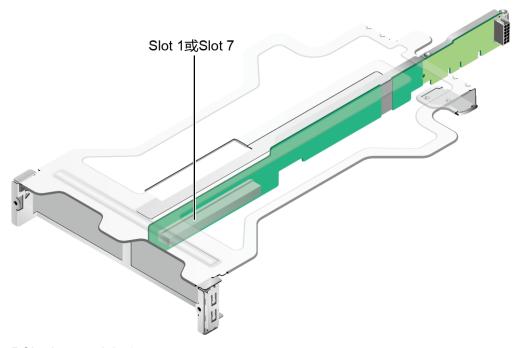

PCle riser module 6

PCle riser module 6 provides PCle slots 6 when installed in I/O module 2.

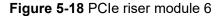

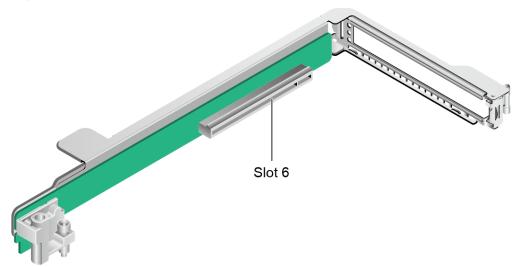

5.7.3 PCIe slot description

◯ NOTE

- When CPU 2 is not detected, the corresponding PCIe slot is unavailable.
- The following table lists the PCIe port numbers mapped to CPUs. For details about the PCIe port number displayed on the BIOS screen, see the Genoa Platform BIOS Parameter Reference.

GPU Model

Table 5-14 PCle slot description

PCIe Riser Module	PCIe Riser Card Installati on Position	PCIe Slot on the PCIe Riser Module	PCIe Slot or Port Descripti on	СРИ	PCIe Port Number	PCIe Devices Support ed by the PCIe Slot or Port
PCle riser module 4	4-GPU built-in adapter board	Slot 4/ Slot 9	PCle 4.0 x16 (x16)	CPU1/ CPU2	P1/P2	FHFL
PCle riser module 5	4-GPU built-in adapter board	Slot 1/ Slot 7	PCIe 4.0 x16 (x16)	CPU1/ CPU2	P2/P1	FHFL

PCIe Riser Module	PCIe Riser Card Installati on Position	PCIe Slot on the PCIe Riser Module	PCIe Slot or Port Descripti on	CPU	PCIe Port Number	PCIe Devices Support ed by the PCIe Slot or Port
PCle riser module 6	I/O module 2	Slot 6	PCle 4.0 x16 (x16)	CPU2	P3	FHHL
-	-	FlexIO card 1	PCle 4.0 x16 (x8, x16 ^c , x8+x8 ^d)	CPU1	P3	OCP 3.0 specificat ions

- a: **PCle 5.0** refers to the PCle of the fifth generation, and **x16** refers to the physical slot width.
- b: The **x16** in brackets indicates that the link bandwidth is x16.
- c: The default link bandwidth of FlexIO card 1 is x8. The link bandwidth can be extended to x16 using cables.
- d: FlexIO card 1 supports the Socket Direct function when it is connected to the two CPUs through high-speed cables.
- The PCIe x16 slots are compatible with PCIe x16, PCIe x8, PCIe x4, and PCIe x1 cards. The bandwidth of the PCIe slot cannot be less than that of the inserted PCIe card.
- The full-height full-length (FHFL) PCIe slots are compatible with FHFL PCIe cards, full-height half-length (FHHL) PCIe cards, and half-height half-length (HHHL) PCIe cards.
- The FHHL PCIe slots are compatible with FHHL PCIe cards and HHHL PCIe cards.
- The maximum power supply of each PCle slot is 75 W.

Server Bus/Device/Function Number (B/D/F) Information

The server's B/D/F information may change with PCIe card configurations. You can obtain the B/D/F information of the server using the following methods:

- SOL serial port information: If serial port information has been collected, search
 the keyword RootBusBDF or DeviceBDF in systemcom.tar file to query the
 B/D/F information of the server.
- The following describes how to obtain the B/D/F information on different OSs:
 - Linux OS: You can obtain the B/D/F information of the server using the Ispci-vvv command.

□ NOTE

If the OS does not support the **Ispci** command by default, obtain the **pci-utils** package from the **yum** source and install it to make the OS support the command.

- Windows OS: After installing the **pci-utils** package, run the **lspci** command to obtain the B/D/F information of the server.
- VMware OS: The **Ispci** command is supported by default. You can directly obtain the B/D/F information of the server using the **Ispci** command.

5.8 PSU

- Supports one or two PSUs.
- Supports AC or DC PSUs.
- Supports hot swap.
- When two PSUs are configured, 1+1 redundancy is supported.
- PSUs of the same P/N code must be used in a server.
- Short-circuit protection is provided, and bipolar fuses are provided for PSUs that support dual live wire input.
- If the DC power supply is used, purchase the DC power supply that meets the requirements of the safety standards or the DC power supply that has passed the CCC certification.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.

Figure 5-19 Positions of PSUs



5.9 Fan Modules

- Supports four fan modules.
- Supports hot swap.
- Supports N+1 redundancy. The server runs properly when one fan fails.
- Supports intelligent fan speed adjustment.
- Fan modules of the same part number (P/N code) must be used in a server.


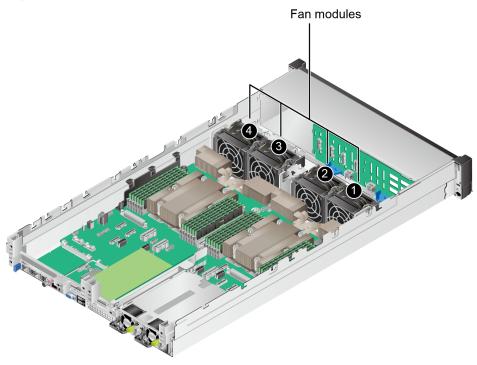


Figure 5-20 Positions of the fan modules

5.10 Boards

5.10.1 Mainboard

Figure 5-21 Mainboard

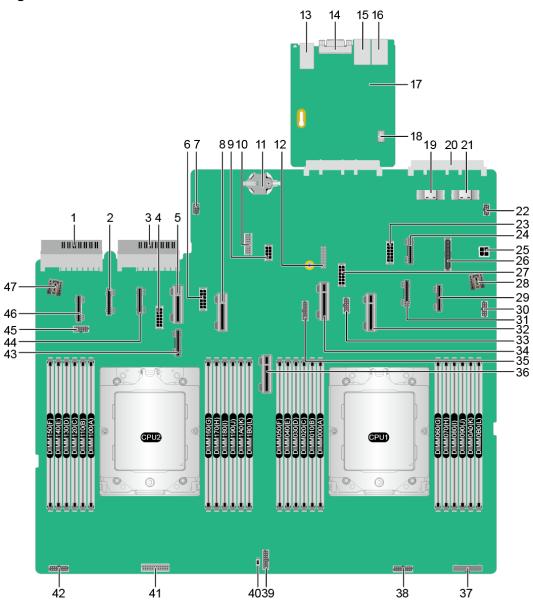

1	PSU2 connector (PSU2/ J19)	2	CPU2 northbound UBC connector (UBC2-2/J27)
3	PSU1 connector (PSU1/ J18)	4	Rear I/O module 3 power connector (IO3 PWR/J20)
5	CPU2 UBC DD connector (UBCDD2-8/J9)	6	Built-in drive module power connector (INNER PWR/ J21)

7	Leakage detection connector (LIQUID CONN/ J17) ^a	8	CPU2 UBC DD connector (UBCDD2-7/J8)
9	DPU power connector (DPU PWR/J77)	10	Mezzanine RAID controller card signal connector (RAID/J42)
11	Cell battery holder (J75)	12	TPM/TCM connector (TPM CONN/J63)
13	Connector with 2 x USB 3.0 ports (USB3.0 CONN/ J88)	14	Rear VGA port (VGA CONN/J60)
15	Serial port (COM/J6020)	16	Rear BMC management port (BMC_GE1/J6019)
17	BMC management board	18	Front BMC management port signal connector (BMC_GE2/J6026)
19	OCP 3.0 NIC UBC connector 2 (UBC1-6 TO OCP H /J34)	20	OCP 3.0 NIC connector (OCP1 CONN/J1)
21	OCP 3.0 NIC UBC connector 1 (UBC1-5 TO OCP L/J32)	22	Liquid-cooling flow regulating port (CTRL VALVE/J16) ^a
23	Rear I/O module 1 power connector (IO1 PWR/J25)	24	CPU1 northbound UBC connector (UBC1-2/J5)
25	Front OCP module power connector (OCP PWR/ J124)	26	Front OCP module low- speed connector (OCP MISC/J120)
27	Rear I/O module 2 power connector (IO2 PWR/J22)	28	Fan board power connector (FAN PWR/J76)
29	CPU1 northbound UBC connector (UBC1-3/J2)	30	Fan board signal connector (FAN BOARD/J15)
31	CPU1 northbound UBC connector (UBC1-4/J3)	32	CPU1 UBC DD connector (UBCDD1-7/J36)
33	NC-SI connector (NCSI CONN/J6)	34	CPU1 UBC DD connector (UBCDD1-8/J37)
35	Built-in drive backplane signal connector (INNER BP /J14)	36	M.2 UBC DD connector (UBCDD M.2/J4)
37	Right mounting ear connector (R_EAR BOARD/J74)	38	Front-drive backplane 2 signal connector (FRONT HDD BP2 /J123)


39	Front-drive backplane 3 signal connector (FRONT HDD BP3/J122) ^a	40	Intrusion sensor connector (INTRUDER CONN/J11)
41	Left mounting ear connector (L_EAR BOARD/J39)	42	Front-drive backplane 1 signal connector (FRONT HDD BP1/J12)
43	CPU2 northbound UBC connector (UBC2-4/J30)	44	CPU2 northbound UBC connector (UBC2-3/J31)
45	Rear I/O module 3 drive backplane signal connector (PSU HDD BP/J13)	46	CPU2 northbound UBC connector (UBC2-1/J29)
47	Front-drive backplane power connector (FRONT HDD PWR/J110)	-	-
a: Reserved and unavailable currently.			

5.10.2 Drive backplane

Front-Drive Backplanes

12 x 2.5" drive pass-through configuration backplane
All drive configurations in section 12 x 2.5" drive pass-through configuration support this backplane.

Figure 5-22 12 x 2.5" drive pass-through configuration backplane

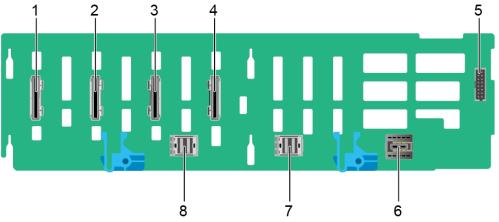


No.	Connector	Managed Drive Slot
1	UBC connector 4 (UBC4/J4)	Slots 10 and 11

No.	Connector	Managed Drive Slot
2	UBC connector 3 (UBC3/J3)	Slots 8 and 9
3	UBC connector 2 (UBC2/J2)	-
4	UBC connector 1 (UBC1/J1)	-
5	Backplane signal connector (HDD BP/ J19)	-
6	Power connector (HDD_POWER/J21)	-
7	mini-SAS HD connector 1 (PORT A/J28)	Slots 0 to 3
8	mini-SAS HD connector 2 (PORT B/J601)	Slots 4 to 7

5.10.3 Fan board


Figure 5-23 Fan board

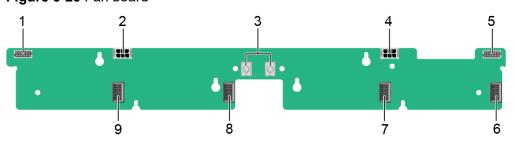

1	Fan board signal connector (FAN_BOARD/J3)	2	Reserved and unavailable currently
3	Fan board power connector (J10 GND_BLACK/J11 POWER_RED)	4	Reserved and unavailable currently
5	Reserved and unavailable currently	6	Fan connector (FAN1/J7)
7	Fan connector (FAN2/J6)	8	Fan connector (FAN3/J5)
9	Fan connector (FAN4/J4)	-	-

5.10.4 M.2 adapter board


Figure 5-24 M.2 adapter board

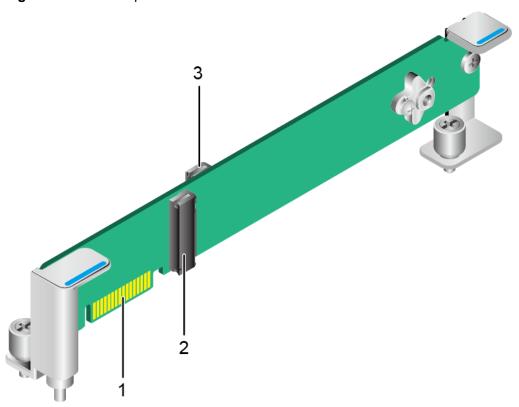

1	Gold finger	2	M.2 slot (M.2 SOCKET_A)
3	M.2 slot (M.2 SOCKET_B)	-	-

5.10.5 GPU Built-in Adapter Board

Figure 5-25 GPU built-in adapter board

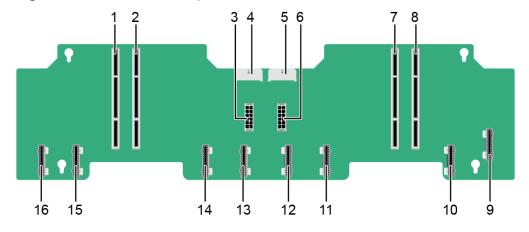

1	Card slot-4CHP connector (Riser4/J13)	2	Card slot-4CHP connector (Riser3/J12)
3	Power connector (PWR_3/ J18)	4	Power connector (PWR_4/ J19)
5	Power connector (PWR_2/ J17)	6	Power connector (PWR_1/ J16)
7	Card slot-4CHP connector (Riser2/J11)	8	Card slot-4CHP connector (Riser1/J10)
9	UBC connector 1 (UBCDD1-8-1/J3)	10	UBC connector 2 (UBCDD1-8-2/J4)
11	UBC connector 3 (UBC1-3/J5)	12	UBC connector 4 (UBC1-4/J6)
13	UBC connector 5 (UBC2-3/J8)	14	UBC connector 6 (UBC2-4/J7)
15	UBC connector 7 (UBCDD2-8-2/J20)	16	UBC connector 8 (UBCDD2-8-1/J9)

6 Product Specifications

- 6.1 Technical specifications
- 6.2 Environmental specifications
- 6.3 Physical specifications

6.1 Technical specifications

Table 6-1 Technical specifications

Component	Specifications	
Form factor	2U rack server	
Processor	Supports one or two processors.	
	 4th-generation AMD EPYC^{®TM} 9004 series processors (Genoa). 	
	Built-in memory controller and 12 memory channels per processor	
	Built-in PCle controller, supporting PCle 5.0 and 128 lanes per processor	
	 Four xGMI buses between processors, providing up to 32 GT/s transmission per channel 	
	Up to 96 cores	
	Max. 4.4 GHz turbo frequency	
	Max. 384 MB L3 cache per CPU	
	Max. 400 W thermal design power (TDP)	
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.	

Component	Specifications
Memory module	24 memory slots.
	Up to 24 DDR5 DIMMs
	RDIMM or RDIMM-3DS support
	 Max. 4800 MT/s memory speed
	 DDR5 memory modules of different types (RDIMM and RDIMM-3DS) and specifications (capacity, bit width, rank, and height) cannot be used together.
	 A server must use DDR5 DIMMs of the same P/N code.
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.

Component	Specifications			
Storage	Supports a variety of drive configurations. For details, see 5.5.1 Drive Configuration and Drive Numbering.			
	Supports two M.2 SSDs.			
	 Some M.2 adapter cards can be configured. Two 2280 CPU pass-through SATA M.2 SSDs are supported. RAID is not supported. 			
	NOTE			
	 The M.2 SSD is used only as a boot device for installing the OS. Small-capacity (32 GB or 64 GB) M. 2 SSDs do not support logging due to poor endurance. If a small-capacity M.2 SSD is used as the Boot device, a dedicated log drive or log server is required for logging. For example, you can dump VMware logs in either of the following ways: 			
	 Redirect /scratch. For details, see https:// kb.vmware.com/s/article/1033696. 			
	 Configure syslog. For details, see https:// kb.vmware.com/s/article/2003322. 			
	 The M.2 SSD cannot be used to store service data due to poor endurance. In write-intensive applications, the M.2 SSD will wear out in a short time. If you want to use SSDs or HDDs as data storage devices, use enterprise-level SSDs or HDDs with high DWPD. The M.2 SSD is not recommended for write-intensive service software due to poor endurance. 			
	 Do not use M.2 SSDs for cache. 			
	Supports hot swap of SAS/SATA/NVMe U.2 drives.			
	 Support a variety of RAID controller cards. For details,see "Search Parts" in the Compatibility List on the support website. 			
	 The RAID controller card supports RAID configuration, RAID level migration, and drive roaming. 			
	 The RAID controller card supports a supercapacitor for power-off protection to ensure user data security. 			
	The PCIe RAID controller card occupies one PCIe slot.			
	For details about the RAID controller card, see the server <i>RAID Controller Card User Guide</i> .			
	NOTE If the BIOS is in legacy mode, the 4K drive cannot be used as the boot drive.			

Component	Specifications			
Network	OCP 3.0 NICs provide network expansion capabilities.			
	 Supports one OCP 3.0 NIC, which can be configured as required. 			
	Supports orderly hot swap.			
	 Supports a variety of OCP 3.0 NICs. For details, visit the technical support website and see Search Parts in the compatibility list. 			
I/O expansion	The server providing a maximum of six standard PCle slots, four full-height full-length dual-slot GPUs, one standard PCle card of full-height half-length, and one OCP slot.			
	For details, see 5.7.2 PCle slots and 5.7.3 PCle slot description .			
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.			
Port	Supports a variety of ports.			
	Ports on the front panel:			
	 One USB Type-C iBMC direct connect management port 			
	- Two USB 3.0 ports			
	 One DB15 VGA port 			
	Ports on the rear panel:			
	- Two USB 3.0 ports			
	 One DB15 VGA port 			
	 One RJ45 serial port 			
	 One RJ45 management network port 			
	NOTE You are not advised to install the OS on the USB storage media			
Video card	An SM750 video chip with 32 MB display memory is integrated on the mainboard. The maximum display resolution is 1920 x 1200 at 60 Hz with 16M colors.			
	NOTE			
	 The integrated video card can provide the maximum display resolution (1920 x 1200) only after the video card driver matching the operating system version is installed. Otherwise, only the default resolution supported by the operating system is provided. 			
	 If both the front and rear VGA ports are connected to monitors, only the monitor connected to the front VGA port displays information. 			

Component	Specifications	
System management	• UEFI	
	• iBMC	
	NC-SI	
	Integration with third-party management systems	
Security feature	Power-on password	
	Administrator password	
	TPM (for China and outside China)/TCM (only for China)	
	Secure boot	
	Front bezel (optional)	
	Chassis cover opening detection	

6.2 Environmental specifications

Table 6-2 Environmental specifications

Item	Specifications		
Temperature	 Operating temperature: 5°C to 45°C (41°F to 113°F) (ASHRAE Classes A1 to A4 compliant) 		
	 Storage temperature (within three months): -30°C to +60°C (-22°F to +140°F) 		
	 Storage temperature (within six months): -15°C to +45°C (5°F to 113°F) 		
	 Storage temperature (within one year): -10°C to +35°C (14°F to 95°F) 		
	 Maximum temperature change rate: 20°C (36°F) per hour and 5°C (9°F) per 15 minutes 		
	NOTE The highest operating temperature varies depending on the server configuration. For details, see A.3 Operating Temperature Limitations.		
Relative humidity (RH,	Operating humidity: 8% to 90%		
non-condensing)	Storage humidity (within three months): 8% to 85%		
	Storage humidity (within six months): 8% to 80%		
	Storage humidity (within one year): 20% to 75%		
	Maximum change humidity rate: 20% per hour		
	Operational climatic range category 8% RH with -12°C (10.4°F) minimum dew point to 90% RH with 24°C (75.2°F) maximum dew point (ASHRAE Classes A4 compliant)		

Item	Specifications		
Air volume	120~320CFM		
Operating altitude	≤ 3050 m (10,006.56 ft)		
	When the server configuration complies with ASHRAE Classes A1 and A2 and the altitude is above 900 m (2952.76 ft), the highest operating temperature decreases by 1°C (1.8°F) for every increase of 300 m (984.25 ft).		
	 When the server configuration complies with ASHRAE Class A3 and the altitude is above 900 m (2952.76 ft), the highest operating temperature decreases by 1°C (1.8°F) for every increase of 175 m (574.15 ft). 		
	 When the server configuration complies with ASHRAE Class A4 and the altitude is above 900 m (2952.76 ft), the highest operating temperature decreases by 1°C (1.8°F) for every increase of 125 m (410.10 ft). 		
	HDDs cannot be used at an altitude of over 3050 m (10,006.56 ft).		
Corrosive gaseous	Maximum growth rate of the corrosion product thickness:		
contaminant	Copper corrosion rate test: 300 Å/month (meeting level G1 requirements of the ANSI/ISA-71.04-2013 standard on gaseous corrosion)		
	Silver corrosion rate test: 200 Å/month		
Particle contaminant	Meets the requirements of ISO 14664-1 Class 8.		
	There is no explosive, conductive, magnetic, or corrosive dust in the equipment room.		
	NOTE It is recommended that the particulate pollution in the equipment room be monitored by a professional agency.		
Acoustic noise	The declared A-weighted sound power levels (LWAd) and declared average bystander position A-weighted sound pressure levels (LpAm) listed are measured at 23°C (73.4°F) in accordance with ISO 7779 (ECMA 74) and declared in accordance with ISO 9296 (ECMA 109).		
	• Idle:		
	- LWAd: 4.85 Bels		
	LpAm: 36.6 dBA		
	Operating:		
	- LWAd: 4.91Bels		
	– LpAm: 37 dBA		
	NOTE Actual sound levels generated during operation vary depending on the configuration, load, and ambient temperature.		

◯ NOTE

SSDs and HDDs (including NL-SAS, SAS, and SATA) cannot be preserved for a long time in the power-off state. Data may be lost or faults may occur if the preservation duration exceeds the specified maximum duration. When drives are preserved under the storage temperature and humidity specified in the preceding table, the following preservation duration is recommended:

- Maximum preservation duration of SSDs:
 - 12 months in power-off state without data stored
 - 3 months in power-off state with data stored
- Maximum preservation duration of HDDs:
 - 6 months in unpacked/packed and powered-off state
- The maximum preservation duration is determined according to the preservation specifications provided by drive vendors. For details, see the manuals provided by drive vendors.

6.3 Physical specifications

Table 6-3 Physical specifications

Category	Description		
Dimensions (H x W x D)	Chassis with 2.5" drives: 86.1 mm x 447 mm x 798 mm (3.39 in. x 17.60 in. x 31.42 in.)		
	Figure 6-1 Physical dimensions		
	Tourns Services and Services an		
	NOTE		
	 See Figure 6-1 for methods in measuring physical dimensions of the chassis. 		

Category	Description	
Installation space	 Requirements for cabinet installation: Cabinet compliant with the International Electrotechnical Commission (IEC) 297 standard Cabinet width: 482.6 mm (19.00 in.) Cabinet depth ≥ 1000 mm (39.37 in.) Requirements for guide rails installation: L-shaped guide rails: apply only to xFusion cabinets. Adjustable L-shaped guide rails: apply to cabinets with a distance of 543.5 mm to 848.5 mm (21.40 in. to 33.41 in.) between the front and rear mounting bars. 	
	- Ball bearing rail kit: applies to cabinets with a distance of 609 mm to 950 mm (23.98 in. to 37.40 in.) between the front and rear mounting bars.	
Weight in full configuration	 Net weight: Maximum weight for a server with 12 x 2.5" front drives: 23.5 kg (51.80 lb) Packaging materials: 5 kg (11.03 lb) 	
Power consumption	The power consumption parameters vary with hardware configurations (including the configurations complying with EU ErP). For details, see Power Calculator on the technical support website.	

Software and Hardware Compatibility

For details about the OS and hardware, see the compatibility list on the technical support website.

NOTICE

- If incompatible components are used, the device may be abnormal. Such a fault is beyond the scope of technical support and warranty.
- The performance of servers is closely related to application software, basic middleware software, and hardware. The slight differences of the application software, middleware basic software, and hardware may cause performance inconsistency between the application layer and test software layer.
 - If the customer has requirements on the performance of specific application software, contact technical support to apply for proof of concept (POC) tests in the pre-sales phase to determine detailed software and hardware configurations.
 - If the customer has requirements on hardware performance consistency, specify the specific configuration requirements (for example, specific drive models, RAID controller cards, or firmware versions) in the presales phase.

8 Safety Instructions

8.1 Security

8.2 Maintenance and Warranty

8.1 Security

General Statement

- Comply with local laws and regulations when installing equipment. These safety instructions are only a supplement.
- Observe the safety instructions that accompany all "DANGER", "WARNING", and "CAUTION" symbols in this document.
- Observe all safety instructions provided on device labels.
- Operators of special types of work (such as electricians, operators of electric forklifts, and so on.) must be certified or authorized by the local government or authority.




In a household scenario, operation of this device may cause radio interference.

Human Safety

- This device is not suitable for use in places where children may be present.
- Only certified or authorized personnel are allowed to install equipment.
- Discontinue any dangerous operations and take protective measures. Report anything that could cause personal injury or device damage to a project supervisor.
- Do not move devices or install cabinets and power cables in hazardous weather conditions.
- Do not carry the weight that exceeds the maximum load per person allowed by local laws or regulations. Before moving a device, check the maximum device weight and arrange required personnel.

• Wear clean protective gloves, ESD clothing, a protective hat, and protective shoes, as shown in **Figure 8-1**.

Figure 8-1 Safety work wear

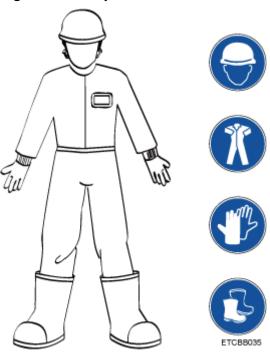

 Before touching a device, wear ESD clothing and gloves (or wrist strap), and remove any conductive objects (such as watches and jewelry). Figure 8-2 shows conductive objects that must be removed before you touch a device.


Figure 8-2 Removing conductive objects



Figure 8-3 shows how to wear an ESD wrist strap.

- a. Secure the ESD wrist strap around your wrist.
- b. Fasten the strap buckle and ensure that the ESD wrist strap is in contact with your skin.
- Insert the ground terminal attached to the ESD wrist strap into the jack on the grounded cabinet or chassis.

Figure 8-3 Wearing an ESD wrist strap

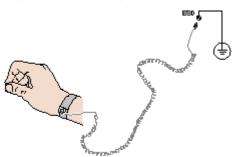

- Exercise caution when using tools that could cause personal injury.
- If the installation position of a device is higher than the shoulders of the
 installation personnel, use a vehicle such as a lift to facilitate installation. Prevent
 the device from falling down and causing personal injury or damage to the
 device.
- The equipment is powered by high-voltage power sources. Direct or indirect contact (especially through damp objects) with high-voltage power sources may result in serious injury or death.
- Ground a device before powering it on. Otherwise, high voltage leakage current may cause personal injury.
- When a ladder is used, ensure that another person holds the ladder steady to prevent accidents.
- Do not look into optical ports without eye protection when installing, testing, or replacing optical cables.

Equipment Safety

- Use the recommended power cables at all times.
- Power cables are used only for dedicated servers. Do not use them for other devices.
- Before operating equipment, wear ESD clothes and gloves to prevent electrostatic-sensitive devices from being damaged by ESD.
- When moving a device, hold the bottom of the device. Do not hold the handles of the installed modules, such as the PSUs, fan modules, drives, and the mainboard. Handle the equipment with care.
- Exercise caution when using tools that could cause damage to devices.
- Connect the primary and secondary power cables to different power distribution units (PDUs) to ensure reliable system operation.
- Ground a device before powering it on. Otherwise, high voltage leakage current may cause device damage.

Transportation Precautions

Improper transportation may damage equipment. Contact the manufacturer for precautions before attempting transportation.

Transportation precautions include but are not limited to:

• The logistics company engaged to transport the device must be reliable and comply with international standards for transporting electronics. Ensure that the

equipment being transported is always kept upright. Take necessary precautions to prevent collisions, corrosion, package damage, damp conditions and pollution.

- Transport each device in its original packaging.
- If the original packaging is unavailable, package heavy, bulky parts (such as chassis and blades) and fragile parts (such as PCIe cards and optical modules) separately.

■ NOTE

For details about components supported by the server, see "Search Parts" in the compatibility list on the technical support website.

Power off all devices before transportation.

Maximum Weight Carried by a Person

CAUTION

The maximum weight allowed to be carried by a single person is subject to local laws or regulations. The markings on the device and the descriptions in the documentation are for reference only.

Table 8-1 lists the maximum weight one person is permitted to carry as stipulated by a number of organizations.

Table 8-1 Maximum weight carried per person

Organization	Weight (kg/lb)		
European Committee for Standardization (CEN)	25/55.13		
International Organization for Standardization (ISO)	25/55.13		
National Institute for Occupational Safety and Health (NIOSH)	23/50.72		
Health and Safety Executive (HSE)	25/55.13		
General Administration of Quality Supervision, Inspection and Quarantine of the People's Republic of China (AQSIQ)	Male: 15/33.08Female: 10/22.05		

For more information about security instructions, see the server Safety Information.

8.2 Maintenance and Warranty

For details about maintenance, visit the **Technical Support Website** > **Service Support Center** > **Customer Support Service**.

For details about warranty, visit the **Technical Support Website** > **Service Support Center** > **Warranty**.

9 System Management

This product integrates the new-generation Intelligent Baseboard Management Controller (iBMC), which complies with Intelligent Platform Management Interface 2.0 (IPMI 2.0) specifications and provides reliable hardware monitoring and management.

The iBMC intelligent management system has the following features:

Various management interfaces

The iBMC provides the following standard interfaces to meet various system integration requirements:

- DCMI 1.5 interface
- IPMI 1.5/IPMI 2.0 interface
- Command-line interface (CLI)
- Redfish interface
- Hypertext Transfer Protocol Secure (HTTPS) interface
- Simple Network Management Protocol (SNMP) interface
- Fault monitoring and diagnosis

The iBMC detects hidden risks and ensures stable, uninterrupted 24/7 system operation by providing the following features:

- The iBMC allows screenshots and videos to be created when the system breaks down, facilitating cause analysis of the system breakdown.
- The iBMC offers screen snapshots and videos, simplifying routine preventive maintenance, recording, and auditing.
- The fault diagnosis & management (FDM) function supports componentbased precise fault diagnosis, facilitating component fault locating and replacement.
- The iBMC supports the reporting of alarms through syslog packets, trap packets, and emails, helping the upper-layer NMS to collect the fault information about the server.
- Security management
 - The iBMC uses image mirroring to improve system security. Even if the running software breaks down, the system can start from the backup image.
 - Diversified user security control interfaces are provided to ensure user login security.

- The iBMC supports import and replacement of multiple types of certificates to ensure data transmission security.
- System maintenance interface
 - The iBMC supports keyboard, video, and mouse (KVM) and virtual media to facilitate remote maintenance.
 - The iBMC supports out-of-band monitoring and configuration of RAID, improving RAID configuration efficiency and management.
 - Smart Provisioning provides a convenient operation interface for installing the OS, configuring RAID, and performing the upgrade without a CD-ROM.
- Diversified network protocols
 - The iBMC supports the Network Time Protocol (NTP) to facilitate time settings and ensure time synchronization.
 - The iBMC supports domain management and directory services to simplify network management.
- Intelligent power management
 - The iBMC uses power capping to improve deployment density.
 - The iBMC uses dynamic power saving to reduce operational expenditure (OPEX).
- License management

By managing licenses, you can use the features of the iBMC advanced edition in authorization mode.

The advanced edition of the iBMC provides the following features:

- Deploy OS through the Redfish interface.
- Collect the original data of intelligent diagnosis using Redfish.

10 Certifications

Country/Region	Certification	Standards	
China	ccc	GB 17625.1-2022	
		GB 4943.1-2022	
		GB/T 9254.1-2021 (Class A)	
China	CQC	CQC3135-2011	
China	RoHS	SJ/T-11364	
		GB/T 26572	
Europe	WEEE	2012/19/EU	
Europe	REACH	EC NO. 1907/2006	
Europe	CE	Safety:	
		EN 62368-1:2014+A11:2017	
		EMC:	
		EN 55032:2015+A1:2020	
		EN IEC 61000-3-2:2019+A1:2021	
		EN 61000-3-3:2013+A1:2019	
		EN 55035:2017+A11:2020	
		RoHS:	
		EN IEC 63000:2018	
		ErP:	
		Commission Regulation(EU) 2019/424	

Country/Region	Certification	Standards		
UK UKCA		Safety:		
		EN 62368-1:2014+A11:2017		
		EMC:		
		EN 55032:2015+A1:2020		
		EN IEC 61000-3-2:2019+A1:2021		
		EN 61000-3-3:2013+A1:2019		
		EN 55035:2017+A11:2020		
		RoHS:		
		EN IEC 63000:2018		
		ErP:		
		Commission Regulation(EU) 2019/424		
US	FCC	FCC PART 15		
Canada	IC	ICES-003		
Japan	VCCI	VCCI 32-1(Class A)		
Russia	EAC&GOST	ГОСТ CISPR 32-2015		
		ГОСТ CISPR 24-2013		
		ГОСТ IEC 61000-3-2-2017		
		ГОСТ IEC 61000-3-3-2015		
		ГОСТ IEC 62368-1-2014		
		ГОСТ IEC 62479-2013		
Global	СВ	IEC 62368-1:2014		

1 1 Waste Product Recycling


If you have xFusion products at the end of their lifecycle and need xFusion's product recycling service, contact xFusion technical support.



A.1 Chassis Label Information

A.1.1 Chassis Head Label

Figure A-1 Chassis head label

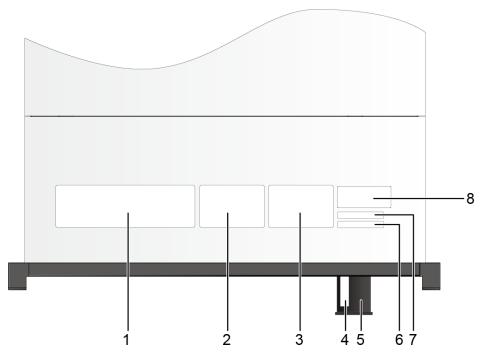

1	Nameplate	2	Certificate
3	Quick Access Label	4	Product SN
			NOTE For details, see A.2 Product SN.

5	Reserved space for customized	6	Pressure-proof label
	label		NOTE This label warns users not to place any objects on top of a rackmounted device.

A.1.1.1 Nameplate

Figure A-2 Nameplate example

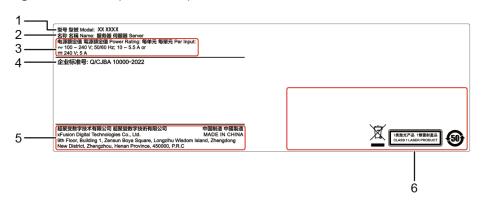


Table A-1 Nameplate description

No.	Description
1	Server model NOTE
	For details, see A.4 Nameplate.
2	Device name
3	Power supply requirements
4	Enterprise standard number
5	Vendor information
6	Certification marks

A.1.1.2 Certificate

Figure A-3 Certificate example



Table A-2 Certificate description

No.	Description
1	Order
2	No. NOTE For details, see Figure A-4 and Table A-3.
3	QC inspector
4	Production date
5	No. barcode

Figure A-4 Certificate number example



Table A-3 Certificate number description

No.	Description
1	P: a fixed value for this digit
2	Z : a fixed value for this digit
3	 Y: a server B: a semi-finished server N: a spare part

No.	Description
4	0: a value for the reserved digit
5	Year (two characters)
6	 Month (one character) Digits 1 to 9 indicate January to September respectively. Letters A to C indicate October to December respectively.
7	 Day (one character) Digits 1 to 9 indicate the 1st to 9th. Letters A to H indicate the 10th to 17th. Letters J to N indicate the 18th to 22nd. Letters P to Y indicate the 23rd to 31st.
8	Hour (one character) • Digits 0 to 9 indicate 0:00 to 9:00. • Letters A to H indicate 10:00 to 17:00. • Letters J to N indicate 18:00 to 22:00. • Letters P to Q indicate 23:00 to 24:00.
9	Serial number (two characters)
10	Manufacturing serial number (five characters)

A.1.1.3 Quick Access Label

Figure A-5 Quick access label example


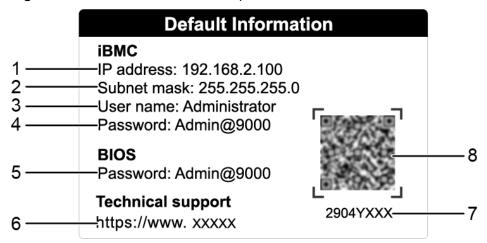


Table A-4 Quick access label description

No.	Description
1	IP address of the iBMC management network port
2	Subnet mask of the iBMC management network port
3	Default iBMC user name
4	Default iBMC password
5	Default BIOS password
6	Technical support website
7	P/N code
8	QR code
	NOTE Scan the QR code to obtain technical support resources.

A.1.2 Chassis Internal Label

Figure A-6 Chassis internal label

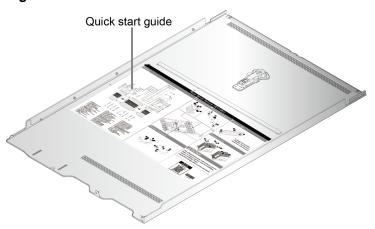


NOTE

- The quick start guide is located on the inside of the chassis cover. It describes how to remove the mainboard components, important components of the chassis, precautions, and QR codes of technical resources. The pictures are for reference only. For details, see the actual product.
- The quick start guide is optional. For details, see the actual product.

A.1.3 Chassis Tail Label

Figure A-7 Chassis tail label

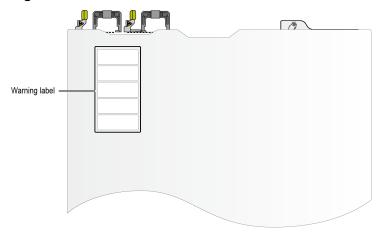

◯ NOTE

For details about the warning label, see the server Safety Information.

A.2 Product SN

The serial number (SN) on the label plate uniquely identifies a server. The SN is required when users contact xFusion technical support. SNs can be in three forms, as shown in SN Sample 1, SN Sample 2, and SN Sample 3.

SN example 1

Figure A-8 SN example 1

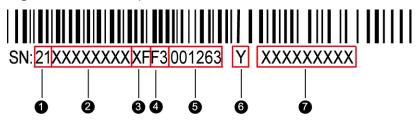


Table A-5 SN description

No.	Description
1	SN ID (two characters), which is 21 .
2	Material identification code (eight characters), that is, the processing code.
3	Vendor code (two characters), that is, the code of the processing place.

No.	Description		
4	Year and month (two characters)		
	The first character indicates the year.		
	Digits 1 to 9 indicate years 2001 to 2009 respectively.		
	Letters A to H indicate years 2010 to 2017 respectively.		
	 Letters J to N indicate years 2018 to 2022 respectively. 		
	 Letters P to Y indicate years 2023 to 2032 respectively. 		
	NOTE The years from 2010 are represented by upper-case letters excluding I, O, and Z because the three letters are similar to the digits 1, 0, and 2. The second character indicates the month. Digits 1 to 9 indicate January to September respectively. Letters A to C indicate October to December		
	respectively.		
5	Serial number (six characters)		
6	RoHS compliance status (one character). Y indicates RoHS compliant.		
7	Internal model, that is, product name.		

• SN example 2

Figure A-9 SN example 2

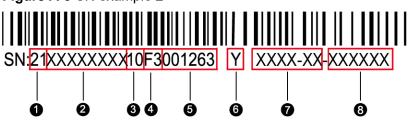


Table A-6 SN example 2

No.	Description
1	SN ID (two characters), which is 21 .
2	Material identification code (eight characters), that is, the processing code.
3	Vendor code (two characters), that is, the code of the processing place.

No.	Description		
4	Year and month (two characters)		
	The first character indicates the year.		
	Digits 1 to 9 indicate years 2001 to 2009 respectively.		
	Letters A to H indicate years 2010 to 2017 respectively.		
	 Letters J to N indicate years 2018 to 2022 respectively. 		
	Letters P to Y indicate years 2023 to 2032 respectively.		
	NOTE The years from 2010 are represented by upper-case letters excluding I, O, and Z because the three letters are similar to the digits 1, 0, and 2.		
	The second character indicates the month.		
	Digits 1 to 9 indicate January to September respectively.		
	Letters A to C indicate October to December respectively.		
5	Serial number (six characters)		
6	RoHS compliance status (one character). Y indicates RoHS compliant.		
7	Nameplate (six characters).		
8	Serial number. The number of digits depends on the actual product.		

• SN example 3

Figure A-10 Label example



Table A-7 Label example description

No.	Description
1	QR code. For details, see Figure A-12.
2	BOM code (10 digits).
3	Product model (13 characters).
4	Product SN (12 characters). For details, see Table A-8.
5	RoHS compliance code (one character).

Figure A-11 SN example

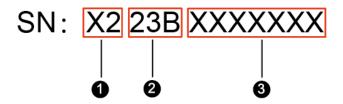


Table A-8 SN description

No.	Description
1	Manufacturer code (two characters).
2	Year and month (three characters).
	The first and second characters indicate the year. NOTE A four-digit year is indicated by the last two digits of the year. For example, 23 indicates the year 2023.
	The third character indicates the month.
	Digits 1 to 9 indicate January to September respectively.
	 Letters A to C indicate October to December respectively.
3	Serial number (seven characters).

Figure A-12 QR code scanning result example

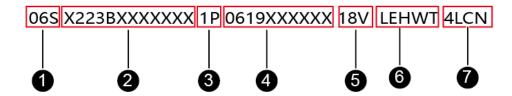


Table A-9 QR code scanning result example description

No.	Description
1	Fixed representation symbol (three characters).
2	Product SN (12 characters). For details, see Table A-8.
3	Data identifier for the material code (two characters).
4	BOM code (10 digits).

No.	Description	
5	Data identifier of manufacturer (three characters).	
6	Code of device manufacturer (five characters).	
7	Data identifier of origin (four characters).	

A.3 Operating Temperature Limitations

Table A-10 Operating temperature limitations

Configuration	Maximum Operating Temperature 30°C (86°F)	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F)
12 x 2.5" drive pass-through configuration	All configurations are supported.	All configurations are supported.	CPUs with TDP that is greater than 290 W are not supported.
			 Rear HDDs and NVMe drives are not supported.
			OCP 3.0 NICs with 100GE ports or ports of higher rate are not supported.
			PCle NICs with 100GE ports or ports of higher rate are not supported.

◯ NOTE

- H800 and L40S GPUs are supported.
- When a single fan is faulty, the highest operating temperature is 5°C (41°F) lower than the rated value
- When a single fan is faulty, the system performance may be affected.
- It is recommended that servers be deployed at an interval of 1U to reduce server noise and improve server energy efficiency.

A.4 Nameplate

Certified Model	Remarks	
2258H V7	Global	
Note: The nameplate depends on the actual product.		

A.5 RAS Features

The server supports a variety of Reliability, Availability, and Serviceability (RAS) features. You can configure these features for better performance.

For details about RAS features, see the *Genoa Platform Server RAS Feature Technical White Paper*.

A.6 Sensor List

Sensor	Description	Component
Inlet Temp	Air inlet temperature	Right mounting ear
Outlet Temp	Air outlet temperature	BMC card
1711 Core Temp	Core temperature of the 1711 chip	BMC card
SSD Max Temp	Maximum SSD temperature (reported by BMA)	SSD
CPUN Core Temp	CPU core temperature	CPUN
		N indicates the CPU number. The value is 1 or 2 .
CPUN MEM Temp	CPU memory module temperature	Memory module corresponding to CPU <i>N N</i> indicates the CPU number. The value is 1 or 2 .
CPUN 12V	12 V voltage supplied by the mainboard to the CPU	Mainboard N indicates the CPU number. The value is 1 or 2 .

Sensor	Description	Component
CPUN Status	CPU status detection	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN Memory	CPU memory status check	Memory module corresponding to CPU <i>N N</i> indicates the CPU number. The value is 1 or 2 .
CPUN Prochot	CPU Prochot	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VDD11 S3	VDD11 S3 voltage	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VDDIO	VDDIO voltage	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VDDCR SOC	VDDCR SOC voltage	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VDDCR0	VDDCR0 voltage	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VDDCR1	VDDCR1 voltage	CPUN N indicates the CPU number. The value is 1 or 2.
CPUN VRD Temp	CPU VRD temperature	Mainboard N indicates the CPU number. The value is 1 or 2.
PSN VIN	PSU N input voltage	PSU N N indicates the PSU number. The value is 1 or 2.

Sensor	Description	Component
PS\$ IIn	PSU input current	PSU
PS\$ IOut	PSU output current	PSU
PS\$ POut	PSU output power	PSU
PS\$ Temp	Maximum internal temperature of the PSU	PSU
PS\$ Inlet Temp	PSU air inlet temperature	PSU
PSN Status	PSU fault status	PSU N
		N indicates the PSU number. The value is 1 or 2 .
PSN Fan Status	PSU fan fault status	PSU N
		N indicates the PSU number. The value is 1 or 2 .
PSN Temp Status	PSU presence status	PSU N
		N indicates the PSU number. The value is 1 or 2 .
PS Redundancy	Redundancy failure due to PSU removal	PSU
Disks Temp	Maximum drive temperature	Drive
PowerN	PSU input power	PSU N
		N indicates the PSU number. The value is 1 or 2 .
FANN F Speed	Fan speed	Fan module <i>N</i>
FANN R Speed		N indicates the fan module number. The value ranges from 1 to 11.
FANN Status	Fan fault status	Fan module <i>N</i>
		N indicates the fan module number. The value ranges from 1 to 11.
FANN Presence	Fan presence	Fan module <i>N</i>
		N indicates the fan module number. The value ranges from 1 to 11 .

Sensor	Description	Component
DIMMN	DIMM status	DIMM <i>N N</i> indicates the DIMM slot number.
RTC Battery	RTC battery status. An alarm is generated when the voltage is lower than 1 V.	RTC battery on the mainboard
Power Button	Power button pressed status	Mainboard and power button
Watchdog2	Watchdog	Mainboard
Mngmnt Health	Management subsystem health status	Management module
UID Button	UID button status	Mainboard
PwrOk Sig. Drop	Voltage drop status	Mainboard
PwrOn TimeOut	Power-on timeout	Mainboard
HDD BP Status	Drive backplane health status	Drive backplane
RiserN 12V	12 V voltage supplied by the mainboard to the riser card	Mainboard N indicates the riser card slot number. The value is 1 or 2.
Riser\$ Temp	Riser card temperature	Riser card
DISK\$	Drive status	Drive
PCIE Status	PCIe status error	PCIe card
PCIe\$ OP Temp	PCIe card optical module temperature sensor	PCle card
PCIe\$ Temp	PCle card chip temperature sensor	PCle card
PCIe RAID\$ Temp	PCIe RAID controller card temperature	PCIe RAID controller card
PCIe\$ Card BBU	BBU status of the PCle RAID controller card	PCIe RAID controller card
PCIe NIC\$ Temp	PCIe card chip temperature sensor	PCle card
PCIe FC\$ Temp	PCIe card chip temperature sensor	PCle card

Sensor	Description	Component
IB\$ Temp	IB NIC temperature sensor	IB card
M2 Adapter Temp	M.2 adapter temperature	M.2 adapter card
M2Disk1	Status of the M.2 drive on the riser card	M.2 adapter card
M2Disk2	Status of the M.2 drive on the riser card	M.2 adapter card
AreaIntrusion	Listening to the unpacking action	Mainboard
OCP\$ OP Temp	OCP card optical module temperature sensor	OCP 3.0 NIC
OCP\$ Temp	OCP card chip temperature sensor	OCP 3.0 NIC
SSD Disk\$ Temp	SSD temperature	SSD
EXP\$ Temp	EXP chip temperature	Drive backplane
GPU\$ Power	GPU power	GPU
GPU\$ Temp	GPU temperature	GPU
GPU\$ HBM Temp	HBM chip temperature of the GPU	GPU
CXL\$ MXC Temp	MXC chip temperature of the CXL memory expansion board (maximum temperature of two chips)	Memory board
CXL\$ MXC1 MEM T	Maximum temperature of DIMMs managed by MXC1 on CXLs (One MXC chip manages two DIMMs.)	Memory board
CXL\$ MXC2 MEM T	Maximum temperature of DIMMs managed by MXC2 on CXLs (One MXC chip manages two DIMMs.)	Memory board
MemBoard\$ Temp	Memory expansion board temperature	Memory board
MemBoard\$ Power	Total power consumption of the memory board	Memory board

Sensor	Description	Component
GPU\$ HBM Temp	HBM chip temperature of the GPU	GPU
GPU\$ Power	GPU power	GPU
GPU\$ Temp	GPU temperature	GPU
GPU\$ LIMIT Temp	GPU limit temperature	GPU
System Notice	Hot restart reminder and fault diagnosis program information collection	N/A
System Error	System suspension or restart. Check the background logs.	
ACPI State	ACPI status	
SysFWProgress	Software processes and system startup errors	
SysRestart	System restart causes	
Boot Error	Boot error	
CPU Usage	CPU usage	
Memory Usage	Memory usage	
BMC Boot Up	BMC startup event	
BMC Time Hopping	Time hopping	
NTP Sync Failed	NTP synchronization failure and recovery events	
SEL Status	SEL full or events being cleared	
ProductID Status	Product identification status	

B Glossary

B.1 A-E

В

	.
ВМС	The baseboard management controller (BMC) complies with the Intelligent Platform Management Interface (IPMI). It collects, processes, and stores sensor signals, and monitors the operating status of components. The BMC provides the hardware status and alarm information about the managed objects to the management system so that the management system can implement unified management of the devices.

Ε

ejector lever	A part on the panel of a device used to facilitate installation or removal of the device.
Ethernet	A baseband local area network (LAN) architecture developed by Xerox Corporation by partnering with Intel and DEC. Ethernet uses the Carrier Sense Multiple Access/Collision Detection (CSMA/CD) access method and allows data transfer over various cables at 10 Mbit/s. The Ethernet specification is the basis for the IEEE 802.3 standard.

B.2 F-J

G

Gigabit Ethernet (GE)	An extension and enhancement of traditional shared media Ethernet standards. It is compatible with 10 Mbit/s and 100 Mbit/s Ethernet and complies with IEEE 802.3z
	standards.

Н

-	Replacing or adding components without stopping or
	shutting down the system.

B.3 K-O

Κ

A hardware device that provides public keyboard, video
and mouse (KVM).

B.4 P-T

Ρ

panel	An external component (including but not limited to ejector levers, indicators, and ports) on the front or rear of the server. It seals the front and rear of the chassis to ensure optimal ventilation and electromagnetic
Peripheral Component Interconnect Express (PCIe)	compatibility (EMC). A computer bus PCI, which uses the existing PCI programming concepts and communication standards, but builds a faster serial communication system. Intel is the main sponsor for PCIe. PCIe is used only for internal interconnection. A PCI system can be transformed to a PCIe system by modifying the physical layer instead of software. PCIe delivers a faster speed and can replace almost all AGP and PCI buses.

R

redundancy	A mechanism that allows a backup device to automatically take over services from a faulty device to ensure uninterrupted running of the system.
redundant array of independent disks (RAID)	A storage technology that combines multiple physical drives into a logical unit for the purposes of data redundancy and performance improvement.

S

server	A special computer that provides services for clients over a network.
Standby 12V Out (SV12)	Standby 12V output of the PSU.
system event log (SEL)	Event records stored in the system used for subsequent fault diagnosis and system recovery.

B.5 U-Z

U

U	A unit defined in International Electrotechnical
	Commission (IEC) 60297-1 to measure the height of a
	cabinet, chassis, or subrack. 1U = 44.45 mm (1.75 in).

X

xGMI	Socket-to-socket global memory interface.
------	---

C Acronyms and Abbreviations

C.1 A-E

Α

AC	alternating current
AES	Advanced Encryption Standard New Instruction Set
ARP	Address Resolution Protocol
AVX	Advanced Vector Extensions

В

BBU	backup battery unit
BIOS	Basic Input/Output System
вмс	baseboard management controller

C

ccc	China Compulsory Certification
CD	calendar day
CE	Conformite Europeenne
CIM	Common Information Model
CLI	command-line interface

D

DC	direct current
DDR5	Double Data Rate 5
DDDC	double device data correction
DEMT	Dynamic Energy Management Technology
DIMM	dual in-line memory module
DRAM	dynamic random-access memory
DVD	digital video disc

Ε

ECC	error checking and correcting
ECMA	European Computer Manufacturer Association
EDB	Execute Disable Bit
EID	enclosure ID
EN	European Efficiency
ERP	enterprise resource planning
ETS	European Telecommunication Standards

C.2 F-J

F

FB-DIMM	Fully Buffered DIMM
FC	Fiber Channel
FCC	Federal Communications Commission
FCoE	Fibre Channel over Ethernet
FTP	File Transfer Protocol

G

GE	Gigabit Ethernet
----	------------------

GPIO	General Purpose Input/Output
GPU	graphics processing unit

Н

НА	high availability
нвм	high bandwidth memory
HDD	hard disk drive
HPC	high-performance computing
НТТР	Hypertext Transfer Protocol
HTTPS	Hypertext Transfer Protocol Secure

I

іВМС	intelligent baseboard management controller
IC	Industry Canada
ICMP	Internet Control Message Protocol
IDC	Internet Data Center
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronics Engineers
IGMP	Internet Group Message Protocol
IOPS	input/output operations per second
IP	Internet Protocol
IPC	Intelligent Power Capability
IPMB	Intelligent Platform Management Bus
IPMI	Intelligent Platform Management Interface

C.3 K-O

Κ

KVM	keyboard, video, and mouse
-----	----------------------------

L

LC	Lucent Connector
LRDIMM	load-reduced dual in-line memory module
LED	light emitting diode
LOM	LAN on motherboard

M

MAC	media access control
MMC	module management controller

Ν

NBD	next business day
NC-SI	Network Controller Sideband Interface

0

C.4 P-T

Ρ

PCle	Peripheral Component Interconnect Express
PDU	power distribution unit
PHY	physical layer
PMBUS	power management bus
РОК	Power OK
PWM	pulse-width modulation
PXE	Preboot Execution Environment

R

RAID	redundant array of independent disks
RAS	reliability, availability and serviceability
RDIMM	registered dual in-line memory module
REACH	Registration Evaluation and Authorization of Chemicals
RJ45	registered jack 45
RoHS	Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment

S

SAS	Serial Attached Small Computer System Interface
SATA	Serial Advanced Technology Attachment
SCM	supply chain management
SDDC	single device data correction
SERDES	serializer/deserializer
SGMII	serial gigabit media independent interface
SMI	serial management interface
SMTP	Simple Mail Transfer Protocol
SNMP	Simple Network Management Protocol
SOL	serial over LAN
SONCAP	Standards Organization of Nigeria-Conformity Assessment Program
SSD	solid-state drive
SSE	Streaming SIMD Extension

T

TACH	tachometer signal
ТВТ	Turbo Boost Technology
TCG	Trusted Computing Group
TCM	trusted cryptography module
TCO	total cost of ownership

TDP	thermal design power
TELNET	Telecommunication Network Protocol
TET	Trusted Execution Technology
TFM	TransFlash module
TFTP	Trivial File Transfer Protocol
TOE	TCP offload engine
ТРМ	trusted platform module

C.5 U-Z (AMD)

U

UBC	Union Bus Connector
UBC DD	Union Bus Connector Double Density
UDIMM	unbuffered dual in-line memory module
UEFI	Unified Extensible Firmware Interface
UID	unit identification light
UL	Underwriter Laboratories Inc.
UPI	UltraPath Interconnect
USB	Universal Serial Bus

۷

VCCI	Voluntary Control Council for Interference by Information Technology Equipment
VGA	Video Graphics Array
VLAN	virtual local area network
VRD	voltage regulator-down

W

WEEE	waste electrical and electronic equipment
WSMAN	Web Service Management