
# FusionServer 1158H V7 Server

# **Technical White Paper**

Issue 03

**Date** 2024-08-02



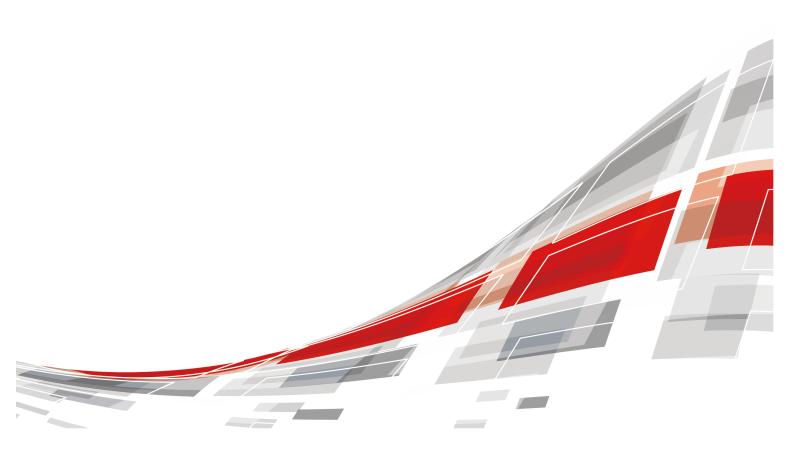

#### Copyright © xFusion Digital Technologies Co., Ltd. 2024. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of xFusion Digital Technologies Co., Ltd.

#### **Trademarks and Permissions**

**CFUSION** and other xFusion trademarks are trademarks of xFusion Digital Technologies Co., Ltd. All other trademarks and trade names mentioned in this document are the property of their respective holders.

#### **Notice**

In this document, "xFusion" is used to refer to "xFusion Digital Technologies Co., Ltd." for concise description and easy understanding, which does not mean that "xFusion" may have any other meaning. Any "xFusion" mentioned or described hereof may not be understood as any meaning other than "xFusion Digital Technologies Co., Ltd.", and xFusion Digital Technologies Co., Ltd. shall not bear any liability resulting from the use of "xFusion".

The purchased products, services and features are stipulated by the contract made between xFusion and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

## xFusion Digital Technologies Co., Ltd.

Address: 9th Floor, Building 1, Zensun Boya Square, Longzihu Wisdom Island

Zhengdong New District 450046 Zhengzhou, Henan Province People's Republic of China

Website: https://www.xfusion.com

# **About This Document**

# **Purpose**

This document describes the appearance, features, performance parameters, and hardware and software compatibility of FusionServer 1158H V7, so that users can have an in-depth and detailed understanding of FusionServer 1158H V7.

# **Intended Audience**

This document is intended for pre-sales engineers.

# **Symbolic Conventions**

The symbols that may be found in this document are defined as follows:

Symbol	Description
▲ DANGER	Indicates a hazard with a high level of risk which, if not avoided, could result in death or serious injury.
<u></u> <b>⚠ WARNING</b>	Indicates a hazard with a medium risk which, if not avoided, could result in death or serious injury.
<b>⚠</b> CAUTION	Indicates a low-level hazard which, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in device damage, data loss, device performance degradation, or other unpredictable results.  NOTICE is used to address practices not related to personal injury.
NOTE	Supplements the important information in the main text.  NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

# **Change History**

Issue	Release Date	Change Description
03	2024-08-02	Updated A.1.1 Chassis Head Label and A.1.1.2 Certificate and Quick Access Label.
02	2024-07-11	Updated 5.2.2 Indicators and Buttons and 6.2 Environmental Specifications.
01	2024-05-20	This issue is the first official release.

# **Contents**

About This Document	ii
1 Overview	1
2 Product Features	2
3 Physical Structure	5
4 Logic Structure	7
5 Hardware Description	8
5.1 Front Panel	
5.1.1 Appearance	
5.1.2 Indicators and Buttons	
5.1.3 Ports	
5.2 Rear Panel	
5.2.1 Appearance	
5.2.2 Indicators and Buttons	
5.2.3 Ports	15
5.3 Processors	17
5.4 Memory	18
5.4.1 DDR5 Memory	18
5.4.1.1 Memory Identifier	18
5.4.1.2 Memory Subsystem Architecture	19
5.4.1.3 Memory Compatibility	20
5.4.1.4 DIMM Installation Rules.	22
5.4.1.5 Positions of the Memory Modules	22
5.4.1.6 Memory Protection Technologies	25
5.5 Storage	25
5.5.1 Drive Configuration and Drive Numbering	25
5.5.1.1 10 x 2.5" Drive NVMe Configuration	25
5.5.1.2 10 x 2.5" Drive Pass-Through Configuration	28
5.5.2 Drive Indicators	31
5.5.3 RAID Controller Card	32
5.6 Network	32
5.6.1 OCP 3.0 NICs	33

5.7 I/O Expansion	33
5.7.1 PCIe Module	33
5.7.2 PCIe Slots	33
5.7.3 PCIe Slot Description	34
5.8 PSUs	36
5.9 Fan Modules	36
5.10 Board	37
5.10.1 Mainboard	38
5.10.2 Drive Backplane	40
5.10.3 Fan Board	42
6 Specifications	43
6.1 Technical Specifications	43
6.2 Environmental Specifications	47
6.3 Physical Specifications	49
7 Software and Hardware Compatibility	51
7.1 Software and Hardware Compatibility	
8 Safety Instructions	
8.1 Security	
8.2 Maintenance and Warranty	
9 System Management	57
10 Certifications	59
11 Waste Product Recycling	60
A Appendix	61
A.1 Chassis Label Information	
A.1.1 Chassis Head Label	61
A.1.1.1 Nameplate	62
A.1.1.2 Certificate and Quick Access Label	63
A.1.2 Chassis Internal Label	64
A.1.3 Chassis Tail Label	65
A.2 Product SN	65
A.3 Operating Temperature Limitations	69
A.4 Nameplate	71
A.5 RAS Features	71
A.6 Sensor List	72
B Glossary	77
B.1 A-E	77
B.2 F-J	78
B.3 K-O	78
B.4 P-T	78

B.5 U-Z (AMD)	
C Acronyms and Abbreviations	81
C.1 A-E	81
C.2 F-J	82
C.3 K-O	83
C.4 P-T	84
C.5 U-Z (AMD)	86

# 1 Overview

FusionServer 1158H V7 is a new-generation 1U 2-socket rack server designed for the Internet, Internet Data Center (IDC), cloud computing, enterprise business, and telecom.

This product is ideal for IT core services, cloud computing, virtualization, high-performance computing, distributed storage, big data processing, enterprise or telecom applications, and other complex workloads.

This product features low power consumption, high scalability, high reliability, and easy management and deployment.

**◯** NOTE

For details about the 1158H V7 nameplate, see **A.4 Nameplate**.

Figure 1-1 Server appearance



# Product Features

#### **Performance**

- 4th-generation AMD EPYC<sup>®TM</sup> 9004 series processors (Genoa). A processor provides up to 96 cores and 192 threads, up to 360 W TDP, a maximum of 4.4 GHz turbo frequency, 1 MB L2 cache and 32 MB L3 cache (shared by eight cores), which deliver supreme processing performance.
- The server supports a maximum of 24 DDR5 4800 MT/s registered dual-inline memory modules (RDIMMs), delivering up to 1.5 TB total memory capacity (calculated using the maximum capacity of a single memory module: 64 GB).
   The memory modules feature high speed and availability.

#### Scalability

- Flexible drive configurations cater to a variety of business requirements and ensure high elasticity and scalability of storage resources.
- Up to 10 x 2.5" front drives.
- Up to 10 x 2.5" NVMe U.2 drives, improving storage density and I/O performance.
- The server supports a maximum of three standard PCle x16 slots, one of which supports PCle 5.0.
- Supports two FLEX I/O cards (adaptive to OCP 3.0 NIC) and GE/10GE/25GE NICs.
- Two M.2 modules can be configured. Enabling quick start of OS drives and improving maintenance flexibility. The M.2 modules are hot swappable.

#### **Availability and Serviceability**

- Carrier-class components with process expertise ensure high system reliability and availability.
- The server uses hot-swappable SAS/SATA drives. SAS/SATA drives support RAID 0, 1, 1E, 10, 5, 50, 6, and 60, depending on the RAID controller card used. It also uses a supercapacitor to protect the RAID cache data against power failures
- The panel provides a UID/Healthy LED indicator and a fault diagnosis LED. The iBMC Web management interface provides key component status. The iBMC web management interface helps technical personnel quickly find faulty

- components or the components with risk of faults, simplifying maintenance, speeding up troubleshooting, and improving system availability.
- The mounting ear provides the iBMC direct connect management port to support local iBMC O&M, improving O&M efficiency.
- A server provides two hot-swappable PSUs in 1+1 redundancy mode and eight hot-swappable fan modules in N+1 redundancy mode, improving system availability.
- The intelligent Baseboard Management Controller (iBMC) can continuously monitor system parameters, trigger alarms, and take recovery measures to minimize shutdown.

#### Manageability and Security

- The built-in iBMC monitors server operating status and provides remote management.
- Supports BIOS menu passwords to ensure the security of system startup and system management.
- Supports the Network Controller Sideband Interface (NC-SI) feature that allows
  a network port to provide functions of both a management network port and a
  service network port. The NC-SI feature can be enabled or disabled through the
  iBMC or BIOS. The NC-SI feature is disabled by default.

#### 

The service network port of the NC-SI feature supports the following configurations:


- It can be bound to any network port of the server's OCP 3.0 NIC or other standard PCIe NICs that support the NC-SI function.
- It allows users to enable or disable the virtual local area network ID (VLAN ID) and configure the VLAN ID. The VLAN ID is **0** and disabled by default.
- It supports IPv4 and IPv6 addresses, and allows users to configure the IP address, subnet mask, default gateway, or prefix length of an IPv6 address.
- The integrated Unified Extensible Firmware Interface (UEFI) improves setup, configuration, and update efficiency and simplifies fault clearance.
- Supports the lockable server front bezel to ensure local data security.
- Supports chassis cover opening detection to enhance physical security.
- Supports secure boot based on the chip-level Root of Trust (RoT) and provides the level-by-level verification function starting from the hardware trusted root, building a complete secure boot chain.
- Supports the trusted platform module (TPM) and trusted password module (TCM) to provide advanced encryption functions, such as digital signature and remote authentication.
- Meets the following requirements in NIST SP 800-147B:
  - The BIOS firmware digital signature update mechanism is supported. During the upgrade, the digital signature is verified to prevent unauthorized BIOS firmware upgrade.
  - The flash security protection mechanism is supported to prevent unauthorized modification of the flash in the OS.

#### **Energy Efficiency**

- Provides 80 Plus Platinum/Titanium PSUs with different energy efficiency levels. The efficiency of the PSUs reaches 96% when the load is 50%.
- Supports active/standby power supply and high-voltage DC power supply to improve the efficiency of the power supply system.
- Efficient Voltage Regulator Down (VRD) power supplies for boards minimize the energy loss from DC/DC power conversion.
- Area-based Proportional-Integral-Derivative (PID) intelligent fan speed adjustment and intelligent CPU frequency scaling optimize heat dissipation and reduce overall system power consumption.
- The improved thermal design with energy-efficient fans ensures optimal heat dissipation and reduces system power consumption.
- The server is protected with power capping and power control measures.
- Staggered spinup of drives reduces the server boot power consumption.

# 3 Physical Structure

Figure 3-1 Physical structure

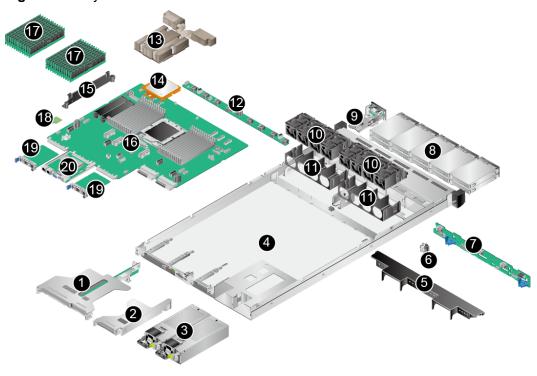


1	I/O module 1	2	I/O module 2
3	PSU	4	Chassis
5	Air duct	6	Intrusion sensor
7	Front-drive backplane	8	Front drive
9	Indicator board module	10	Fan module
11	Fan module bracket	12	Fan board
13	Processor heat sink	14	Processor
15	Cable management arm	16	Mainboard

17	Memory	18	TPM/TCM
19	OCP 3.0 NIC	20	BMC card

# 4 Logic Structure

Figure 4-1 Logic structure

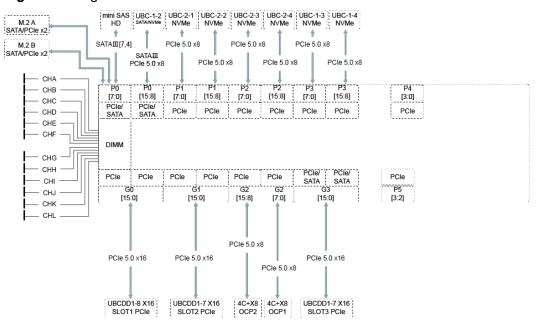

- The server supports one four-generation AMD EPYC<sup>TM</sup> processors (Genoa). It supports 24 DDR5 DIMMs.
- The PCIe bus resources of the processor are connected to the PCIe Riser card through PCBs or cables. Different PCIe Riser cards support PCIe slots of different specifications. The server supports two OCP 3.0 NICs.
- The BMC card integrates the BMC management chip and provides external video graphic array (VGA), management network port, and serial port.


# 5 Hardware Description

- 5.1 Front Panel
- 5.2 Rear Panel
- 5.3 Processors
- 5.4 Memory
- 5.5 Storage
- 5.6 Network
- 5.7 I/O Expansion
- 5.8 PSUs
- 5.9 Fan Modules
- 5.10 Board

#### 5.1 Front Panel

## 5.1.1 Appearance

Figure 5-1 Front view

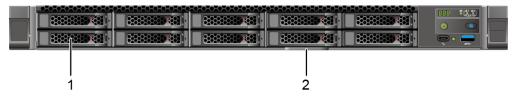

1	Drive	2	Slide-out label plate (with
			an SN label)

#### 5.1.2 Indicators and Buttons

#### **Indicator and Button Positions**

Figure 5-2 Indicators and buttons on the front panel



1	Fault diagnosis LED	2	Health status indicator
3	FlexIO card 1 presence indicator	4	FlexIO card 2 presence indicator
5	UID button/indicator	6	iBMC direct connect management port indicator
7	Power button/indicator	-	-

#### **Indicator and Button Descriptions**

**Table 5-1** Description of indicators and buttons on the front panel

Sign	Indicators and Buttons	Description
888	Fault diagnosis LED	<ul> <li>: The device is operating properly.</li> <li>Error code: A component is faulty.</li> <li>NOTE         If multiple error codes are generated at the same time, the error codes are displayed in a loop. Each error code is displayed for 5 seconds.     </li> <li>For details about fault codes, see the iBMC Alarm Handling.</li> </ul>
<b>₩</b>	Health status indicator	<ul> <li>Off: The device is powered off or faulty.</li> <li>Blinking red at 1 Hz: A major alarm has been generated on the system.</li> <li>Blinking red at 5 Hz: A critical alarm has been generated on the system.</li> <li>Steady green: The device is operating properly.</li> </ul>

Sign	Indicators and Buttons	Description
**	FlexIO card presence indicator	<ul> <li>Indicates whether the FlexIO card is detected.</li> <li>Off: The FlexIO card is not detected.</li> <li>Steady green: The FlexIO card is detected and the power supply is normal.</li> </ul>
ර	Power button/indicator	<ul> <li>Off: The device is powered off.</li> <li>Steady green: The device is powered on.</li> <li>Blinking yellow: The iBMC is starting. The power button is locked and cannot be pressed. The iBMC is started in about 1 minute, and then the power indicator is steady yellow.</li> <li>Steady yellow: The device is in the standby state.</li> <li>Power button:</li> <li>When the device is powered on, you can press this button to gracefully shut down the OS.</li> <li>NOTE  For different OSs, you may need to shut down the OS as prompted.</li> <li>When the device is powered on, you can hold down this button for 6 seconds to forcibly power off the device.</li> <li>When the power indicator is steady yellow, you can press this button to power on the device.</li> </ul>
<b>(</b>	UID button/ indicator	<ul> <li>The UID button/indicator helps identify and locate a device.</li> <li>UID indicator:</li> <li>Off: The device is not being located.</li> <li>Blinking or steady blue: The device is being located.</li> <li>UID button:</li> <li>You can control the UID indicator status by pressing the UID button or using the iBMC.</li> <li>You can press this button to turn on or off the UID indicator.</li> <li>You can press and hold down this button for 4 to 6 seconds to reset the iBMC.</li> </ul>

Sign	Indicators and Buttons	Description
	iBMC direct connect management	Indicates the status when the iBMC direct connect management port connects to a terminal (local PC or Android mobile phone):
	port indicator	Off: No terminal is connected.
		Blinking green at short intervals for 3 seconds and then off: The port is disabled.
		Steady green: The terminal is connected.
		Indicates the status when the iBMC direct connect management port connects to a USB device:
		Blinking red at long intervals: The job fails or an error is reported when the job is complete.
		Blinking green at short intervals: The job is being executed.
		Blinking green at short intervals for 3 seconds and then off: The port is disabled.
		Steady green: The server configuration file is being copied from the USB device or the job is successfully completed.

#### **5.1.3 Ports**

#### **Port Positions**

Figure 5-3 Ports on the front panel



1	iBMC direct connect	2	USB 3.0 port
	management port		

#### **Port Description**

**Table 5-2** Ports on the front panel

Name	Туре	Quantity	Description
iBMC direct connect management port	USB Type-C NOTE The USB 2.0 protocol is supported.	1	Used to connect to a local PC or mobile phone using a USB Type-C cable to monitor and manage the system.  NOTE Only local PCs running Windows 10 and mobile phones running Android are supported.
			To log in to the iBMC from a local PC, enter https://IP address of the iBMC management network port in the address box of the browser on the local PC.  When accessing the iBMC through a mobile phone, you
			need to use the mobile application FusionMobile. For details, see the FusionMobile User Guide.
			Used to connect to a USB device.
			NOTICE
			<ul> <li>Before connecting an external USB device, ensure that the USB device functions properly; otherwise, it may adversely impact the server.</li> </ul>
			For details about how to connect a USB device to the iBMC direct connect management port, see the iBMC User Guide.

Name	Туре	Quantity	Description
USB port	USB 3.0	1	Used to connect to a USB 3.0 device.  NOTICE
			Before connecting an external USB device, ensure that the USB device functions properly; otherwise, it may adversely impact the server.
			The USB 3.0 port can be used to supply power to low-power peripherals. However, the USB 3.0 port must comply with the USB specifications. To run advanced peripherals, such as external CD/DVD drives, an external power supply is required.

## 5.2 Rear Panel

# 5.2.1 Appearance

Figure 5-4 Rear view

2

3

4

5

6

1	I/O module 1	2	I/O module 2
3	PSU 1	4	PSU 2
5	(Optional) FlexIO card 1	6	(Optional) FlexIO card 2
	NOTE The FlexIO card slot supports only OCP 3.0 NICs.		NOTE The FlexIO card slot supports only OCP 3.0 NICs.


#### **NOTE**

- I/O module 1 and I/O module 2 support only PCIe riser modules.
- For details about the OCP 3.0 NIC, see 5.6.1 OCP 3.0 NICs.
- The figure is for reference only. The actual configuration may vary.

#### 5.2.2 Indicators and Buttons

#### **Indicator Positions**

Figure 5-5 Indicators on the rear panel

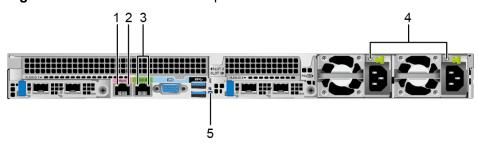

1	Data transmission status indicator of the management network port	2	Connection status indicator of the management network port
3	Serial port indicator  NOTE  Reserved and unavailable currently.	4	PSU indicator
5	UID Indicator	-	-

#### **Indicator Description**

Table 5-3 Description of indicators on the rear panel


Sign	Indicator	Description
-	Data transmission status indicator of the management network port	<ul><li>Off: No data is being transmitted.</li><li>Blinking yellow: Data is being transmitted.</li></ul>
-	Connection status indicator of the management network port	<ul> <li>Off: The network is not connected.</li> <li>Steady green: The network port is properly connected.</li> </ul>

Sign	Indicator	Description
-	PSU indicator	Off: No power is supplied.
		Blinking green at 1 Hz:
		<ul> <li>The input is normal and the power supply enters SV12 mode.</li> </ul>
		<ul> <li>The input is overvoltage or undervoltage.</li> </ul>
		<ul> <li>The PSU is in deep hibernation mode.</li> </ul>
		Blinking green at 4 Hz: The firmware is being upgraded online.
		Steady green: The input and output are normal.
		Steady orange: The input is normal but there is no output.
		NOTE  The possible causes of no output are as follows:
		<ul> <li>Power supply overtemperature protection</li> </ul>
		Power output overcurrent or short- circuit
		Output overvoltage
		Short-circuit protection
		<ul> <li>Device failure (excluding failure of all devices)</li> </ul>
<b>®</b>	UID Indicator	The UID indicator helps identify and locate a device.
		Off: The device is not being located.
		Blinking or steady blue: The device is being located.
		NOTE You can control the UID indicator status by pressing the UID button or using the iBMC.

#### **5.2.3 Ports**

#### **Port Positions**

Figure 5-6 Ports on the rear panel

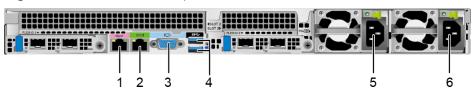

1	Management network port	2	Serial port
3	VGA port	4	USB 3.0 port
5	Socket for PSU 1	6	Socket for PSU 2

# **Port Description**

**Table 5-4** Ports on the rear panel

Name	Туре	Quantity	Description
Management network port	RJ45	1	iBMC management network port, which is used to manage the server.
			The management network port is a GE port that supports 100 Mbit/s and 1000 Mbit/s autonegotiation.  The management network port is a continuous port in the management of the management is a continuous port in the
			The iBMC management network port cannot be connected to a PoE-powered device (such as a PoE switch with the PoE function enabled). Forcible interconnection may cause link communication problems or damage to the management network port.
Serial port	RJ45	1	A port used for debugging. By default, it serves as the OS serial port. You can also set it as the iBMC serial port on the iBMC CLI.
			NOTE The port is a 3-wire serial communication port, and its default baud rate is 115,200 bit/s.
VGA port	DB15	1	Used to connect a display terminal, such as a monitor or KVM.

Name	Туре	Quantity	Description
USB port	USB 3.0	2	Used to connect to a USB 3.0 device.  NOTICE  The maximum current is 1.3 A for an external USB device.  Before connecting an external USB device, ensure that the USB device functions properly; otherwise, it may adversely impact the server.  The USB 3.0 port can be used to supply power to low-power peripherals. However, the USB 3.0 port must comply with the USB specifications. To run advanced peripherals, such as external CD/DVD drives, an external power supply is required.
PSU socket	-	2	Used to connect to a power distribution unit (PDU) through a power cable. You can select the PSUs as required.  NOTE  When determining the PSUs, ensure that the rated power of the PSUs is greater than that of the server.

# **5.3 Processors**

- The server supports only one processor.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.

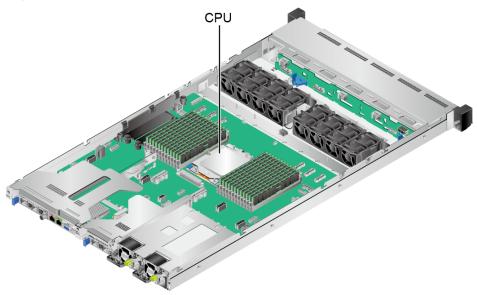


Figure 5-7 Positions of the processors

# **5.4 Memory**

## 5.4.1 DDR5 Memory

#### **5.4.1.1 Memory Identifier**

You can determine the memory module properties based on the label attached to the memory module and the following figures and tables.

Figure 5-8 Memory identifier

1 2 3 4 5 6 7 8 9

64GB 1Rx8 PC5-4800B-RD0-1010-XT

Issue 03 (2024-08-02)

Description	Example
Capacity	• 32 GB • 64 GB
rank(s)	<ul><li>1R = Single rank</li><li>2R = Dual rank</li></ul>
Data width on the DRAM	<ul><li>x4: 4-bit</li><li>x8: 8-bit</li></ul>
Type of the memory interface	• PC5 = DDR5
Maximum memory speed	• 4800 MT/s
Memory Delay Parameter (CL-nRCD-nRP)	<ul> <li>A = 34-34-34</li> <li>B = 40-40-40</li> <li>C = 42-42-42</li> </ul>
DIMM type	RD0: Reference design for version RDIMM D0
SPD Version	<ul><li>10: SPD version</li><li>10: SPD versions from Byte 192 to Byte 447</li></ul>
Temperature class	<ul> <li>Extended temperature grade (XT): 0°C to 95°C (32°F to 203°F)</li> <li>Normal temperature grade (NT): 0°C to 85°C (32°F to 185°F)</li> </ul>
	rank(s)  Data width on the DRAM  Type of the memory interface  Maximum memory speed  Memory Delay Parameter (CL-nRCD-nRP)  DIMM type  SPD Version

#### **5.4.1.2 Memory Subsystem Architecture**

The server provides 24 memory interfaces. Each processor integrates 12 memory channels.

Install the memory modules in the primary memory channels first. If the primary memory channel is not populated, the memory modules in secondary memory channels cannot be used.

Table 5-5 Memory channels

CPU	Channel	Memory Slot
CPU	DIMMA0	DIMM000(A0)
	DIMMA1 (primary)	DIMM001(A1)
	DIMMB0	DIMM010(B0)

СРИ	Channel	Memory Slot
	DIMMB1 (primary)	DIMM011(B1)
	DIMMC0	DIMM020(C0)
	DIMMC1 (primary)	DIMM021(C1)
	DIMMD0	DIMM030(D0)
	DIMMD1 (primary)	DIMM031(D1)
	DIMME0	DIMM040(E0)
	DIMME1 (primary)	DIMM041(E1)
	DIMMF0	DIMM050(F0)
	DIMMF1 (primary)	DIMM051(F1)
	DIMMG0	DIMM060(G0)
	DIMMG1 (primary)	DIMM061(G1)
	DIMMH0	DIMM070(H0)
	DIMMH1 (primary)	DIMM071(H1)
	DIMMI0	DIMM080(I0)
	DIMMI1 (primary)	DIMM081(I1)
	DIMMJ0	DIMM090(J0)
	DIMMJ1 (primary)	DIMM091(J1)
	DIMMK0	DIMM0A0(K0)
	DIMMK1 (primary)	DIMM0A1(K1)
	DIMML0	DIMM0B0(L0)
	DIMML1 (primary)	DIMM0B1(L1)

# **5.4.1.3 Memory Compatibility**

Observe the following rules when configuring DDR5 memory modules:

#### **NOTICE**

- A server must use DDR5 memory modules of the same part number (P/N code), and the memory speed is the lower one of the following two speed values:
  - Memory speed supported by a CPU
  - Maximum operating speed of a memory module
- The DDR5 memory modules of different types (RDIMM and RDIMM-3DS) and specifications (capacity, bit width, rank, and height) cannot be used together.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- The memory module can be used with the 4th-generation AMD EPYC<sup>TM</sup> Genoa processors. The maximum memory capacity supported by all processor models is the same.
- The calculation formula of total memory capacity supported is as follows: the total memory capacity equals the capacity sum of all DDR5 memory modules.
- For details about the type of a single memory module, consult your local sales representatives or see "Search Parts" in the compatibility list on the technical support website.
- The maximum number of memory modules supported depends on the memory module type and number of ranks.

**Table 5-6** DDR5 memory parameters

Parameter		Specifications		
Capacity of a DDR5	memory (GB)	32	64	
Туре		RDIMM	RDIMM	
Rated speed (MT/s)		4800	4800	
Operating voltage (\	/)	1.1	1.1	
Maximum number o server	f DDR5 DIMMs of a	24	24	
Maximum DDR5 memory capacity of the server (GB)		768	1536	
Actual rate (MT/s)	1DPC <sup>a</sup>	4800	4800	

- a: DIMM per channel (DPC) indicates the number of memory modules per channel.
- For the actual maximum rate, refer to Table 5-8.
- The information listed in this table is for reference only. For details, consult the local sales representatives or see "Search Parts" in the compatibility list on the technical support website.

#### 5.4.1.4 DIMM Installation Rules

Observe the following rules when configuring DDR5 memory modules:

- At least one DDR5 memory module must be configured for an AMD Genoa CPU.
- The memory modules configured must be DDR5 RDIMMs.
- The memory modules must be configured with the same number of ranks.
- Install filler memory modules in vacant slots.

#### **5.4.1.5 Positions of the Memory Modules**

A server supports up to 24 DDR5 memory modules.

Observe the memory module installation rules when configuring memory modules. For details, see the memory configuration guide on the technical support website.

Figure 5-9 Positions of the memory modules

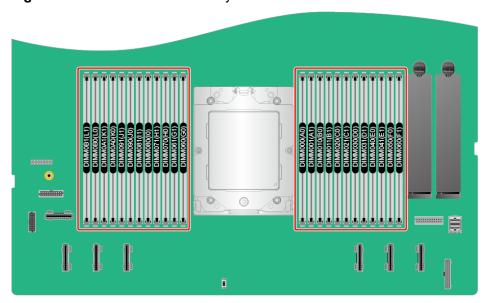


Table 5-7 DDR5 memory modules installation guidelines

Pro	Chann	nann DIMM Slot Number of M				mory Modules						
ces	el		1	2	4	6	8	10	12	16	20	24
			1 DIMM per Channel						2 DI Cha	MM pe	er.	
CP U	DIMMA 0	DIMM000(A 0)	Х	Х	Х	Х	Х	Х	Х	•	•	•
	DIMMA 1 (primar y)	DIMM001(A 1)	•	•	•	•	•	•	•	•	•	•

DIMMB 0	DIMM010 (B0)	Х	Х	X	X	X	Х	X	•	•	•
DIMMB 1 (primar y)	DIMM011(B 1)	Х	X	Х	•	•	•	•	•	•	•
DIMMC 0	DIMM020(C 0)	Х	Х	Х	Х	Х	Х	Х	•	•	•
DIMMC 1 (primar y)	DIMM021(C 1)	Х	Х	•	•	•	•	•	•	•	•
DIMMD 0	DIMM030(D 0)	Х	Х	Х	Х	Х	Х	Х	Х	•	•
DIMMD 1 (primar y)	DIMM031(D 1)	X	X	Х	X	X	•	•	X	•	•
DIMME 0	DIMM040(E 0)	Х	Х	Х	Х	Х	Х	Х	•	•	•
DIMME 1 (primar y)	DIMM041(E 1)	X	X	X	X	•	•	•	•	•	•
DIMMF 0	DIMM050(F 0)	Х	Х	Х	Х	Х	Х	Х	Х	Х	•
DIMMF 1 (primar y)	DIMM051(F 1)	Х	X	Х	Х	Х	Х	•	Х	X	•
DIMM G0	DIMM060(G 0)	Х	Х	Х	Х	Х	Х	Х	•	•	•
DIMM G1 (primar y)	DIMM061(G 1)	Х	•	•	•	•	•	•	•	•	•
DIMMH 0	DIMM070(H 0)	Х	Х	X	Х	Х	Х	Х	•	•	•
DIMMH 1 (primar y)	DIMM071(H 1)	Х	Х	Х	•	•	•	•	•	•	•

DIMMI 0	DIMM080(I0 )	Х	Х	Х	Х	Х	Х	Х	•	•	•
DIMMI 1 (primar y)	DIMM081(I1 )	Х	Х	•	•	•	•	•	•	•	•
DIMMJ 0	DIMM090(J 0)	X	X	X	X	X	Х	Х	X	•	•
DIMMJ 1 (primar y)	DIMM091(J 1)	Х	Х	Х	Х	Х	•	•	Х	•	•
DIMMK 0	DIMM0A0(K 0)	Х	Х	Х	Х	Х	Х	Х	•	•	•
DIMMK 1 (primar y)	DIMM0A1(K 1)	Х	Х	Х	Х	•	•	•	•	•	•
DIMML 0	DIMM0B0(L 0)	Х	Х	Х	Х	Х	Х	Х	Х	Х	•
DIMML 1 (primar y)	DIMM0B1(L 1)	Х	Х	Х	Х	Х	Х	•	Х	X	•

Note: • indicates an installation position, and X indicates an empty slot.

Table 5-8 Maximum memory rate

Memory Type	DIMM0	DIMM1	DDR5 Rate
RDIMM	-	1R	4800MT/s
	1R	1R	4000MT/s
	-	2R	4800MT/s
	2R	2R	3600MT/s
3DS RDIMM	-	2S2R(4 ranks)	4800MT/s
	-	2S4R(8 ranks)	4800MT/s
	-	2S8Rx4(16 ranks)	4800MT/s
	2S2R(4 ranks)	2S2R(4 ranks)	3600MT/s
	2S4R(8 ranks)	2S4R(8 ranks)	3600MT/s

Memory Type	DIMM0	DIMM1	DDR5 Rate	
	2S8Rx4(16 ranks)	2S8Rx4(16 ranks)	3600MT/s	

#### **5.4.1.6 Memory Protection Technologies**

- ECC
- Error Check and Scrub (ECS)
- UECC Retry
- Address/Command Parity with Replay
- Write Data CRC with Replay
- Read Data CRC with Replay
- Patrol Scrubber
- Redirect Scrubber
- Thermal Throttling
- Post-Package Repair

# 5.5 Storage

# 5.5.1 Drive Configuration and Drive Numbering

#### 5.5.1.1 10 x 2.5" Drive NVMe Configuration

#### **Drive Configuration**

Table 5-9 Drive configuration

Configuration	Front Drive	Rear Drive	Drive Management Mode
10 x 2.5" drive NVMe configuration 1	<ul> <li>Front drives (10 x 2.5" drives):</li> <li>Slots 0 to 7 support only SATA/NVMe drives.</li> <li>Slots 8 and 9 support only NVMe drives.</li> </ul>	-	<ul> <li>SATA drive:         CPU pass-         through</li> <li>NVMe drive:         CPU pass-         through</li> </ul>

Configuration	Front Drive	Rear Drive	Drive Management Mode
10 x 2.5" drive NVMe configuration 2	<ul> <li>Front drives (10 x 2.5" drives):</li> <li>Slots 0 to 7 support SAS/SATA/NVMe drives.</li> <li>Slots 8 and 9 support only NVMe drives.</li> </ul>	-	<ul> <li>SAS/SATA drive: 1 x PCle plug-in RAID controller card<sup>a</sup> The PCle plug- in RAID controller card is installed in slot 1 by default.</li> <li>NVMe drive: CPU pass- through</li> </ul>

a: This configuration supports only the standard 9560-8i (3908) and 9540-8i (3808iMR) PCIe plug-in RAID controller cards.

For details about the optional components, consult your local sales representative or see "Search Parts" in the compatibility list on the technical support website.

#### **Drive Numbering**

#### NOTICE

The drive numbers identified by the RAID controller card vary depending on the cabling of the RAID controller card. This section uses the drive numbers identified by a RAID controller card that adopts the default cabling described in "Internal Cabling" in the server *Maintenance and Service Guide*.

Drive numbering of 10 x 2.5" drive pass-through configuration 1 (10 x NVMe drives) in Table 5-9

Figure 5-10 Drive numbering



Table 5-10 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI
0	0
1	1

Drive No.	Drive Number Displayed on the iBMC WebUI
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Drive numbering of "10 x 2.5" drive pass-through configuration 2 (10 x NVMe drives)" in Table 5-9

#### **◯** NOTE

The RAID controller card displays the drive numbering only when SAS/SATA drives are configured.

Figure 5-11 Drive numbering



Table 5-11 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
0	0	O <sup>Note</sup>
1	1	1 <sup>Note</sup>
2	2	2 <sup>Note</sup>
3	3	3 <sup>Note</sup>
4	4	4 <sup>Note</sup>
5	5	5 <sup>Note</sup>
6	6	6 <sup>Note</sup>
7	7	7 <sup>Note</sup>
8	8	-

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
9	9	-

Note: If the slot is configured with a SAS/SATA drive, the RAID controller card can manage the drive and allocate a number to the drive.

#### 5.5.1.2 10 x 2.5" Drive Pass-Through Configuration

## **Drive Configuration**

Table 5-12 Drive configuration

Configuration	Front Drive	Rear Drive	Drive Management Mode
10 x 2.5" drive pass-through configuration 1 (6 x SATA drives + 4 x NVMe drives)	<ul> <li>Front drives (10 x 2.5" drives):</li> <li>Slots 0 to 5 support only SATA drives.</li> <li>Slots 6 and 7 support only SATA/ NVMe drives.</li> <li>Slots 8 and 9 support only NVMe drives.</li> </ul>	_	<ul> <li>SATA drive:         CPU pass-         through</li> <li>NVMe drive:         CPU pass-         through</li> </ul>
10 x 2.5" drive pass-through configuration 2 (6 x SAS/SATA drives + 4 x NVMe drives)	<ul> <li>Front drives (10 x 2.5" drives):</li> <li>Slots 0 to 5 support only SAS/SATA drives.</li> <li>Slots 6 and 7 support SAS/SATA/NVMe drives.</li> <li>Slots 8 and 9 support only NVMe drives.</li> </ul>	-	<ul> <li>SAS/SATA         drive: 1 x PCle         plug-in RAID         controller card         The PCle plug-         in RAID         controller card         is installed in         slot 1 by         default.</li> <li>NVMe drive:         CPU pass-         through</li> </ul>

Configuration	Front Drive	Rear Drive	Drive
			Management
			Mode

a: This configuration supports only the standard 9560-8i (3908) and 9540-8i (3808iMR) PCIe plug-in RAID controller cards.

For details about the optional components, consult your local sales representative or see "Search Parts" in the compatibility list on the technical support website.

#### **Drive Numbering**

#### NOTICE

The drive numbers identified by the RAID controller card vary depending on the cabling of the RAID controller card. This section uses the drive numbers identified by a RAID controller card that adopts the default cabling described in "Internal Cabling" in the server *Maintenance and Service Guide*.

Drive numbering of 10 x 2.5" drive pass-through configuration 1 (4 x NVMe drives) in Table 5-12

Figure 5-12 Drive numbering



Table 5-13 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Drive numbering of "10 x 2.5" drive pass-through configuration 2 (4 x NVMe drives)" in Table 5-12

#### **◯** NOTE

The RAID controller card displays the drive numbering only when SAS/SATA drives are configured.

Figure 5-13 Drive numbering



Table 5-14 Drive numbering

Drive No.	Drive Number Displayed on the iBMC WebUI	Drive Number Identified by the RAID Controller Card
0	0	0
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6 <sup>Note</sup>
7	7	7 <sup>Note</sup>
8	8	-
9	9	-

Note: If the slot is configured with a SAS/SATA drive, the RAID controller card can manage the drive and allocate a number to the drive.

### 5.5.2 Drive Indicators

#### **SAS/SATA Drive Indicators**

Figure 5-14 SAS/SATA drive indicators


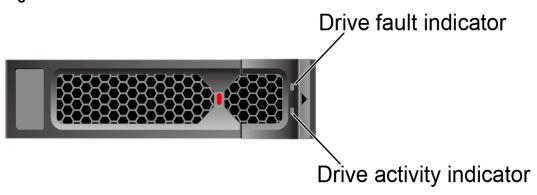


Table 5-15 SAS/SATA drive indicator description

Activity Indicator (Green)	Fault Indicator (Red/Blue)	Description
Off	Off	The drive is not detected.
Steady on	Off	The drive is detected.
Blinking at 4 Hz	Off	Data is being read or written properly, or data on the primary drive is being rebuilt.
Steady on	Blinking blue at 4 Hz	The drive is being located.
Blinking at 1 Hz	Blinking red at 1 Hz synchronously	Data on the secondary drive is being rebuilt.
Off	Red steady on	A drive in a RAID array is removed.
Steady on	Red steady on	The drive is faulty.

#### **NVMe Drive Indicators**

Figure 5-15 NVMe drive indicators

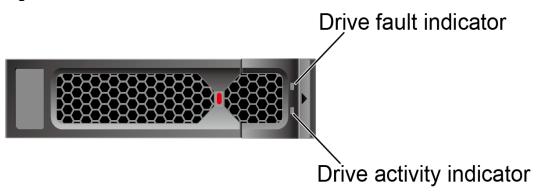

NVMe drives support surprise or orderly hot swap.

Table 5-16 NVMe drive indicator description

Active Indicator (Green)	Fault Indicator (Red/Blue)	Description
Off	Off	The NVMe drive is not detected.
Steady on	Off	The NVMe drive is detected and operating properly.
Blinking at 4 Hz	Off	Data is being read from or written to the NVMe drive.
Steady on/blinking	Blinking blue at 4 Hz	The NVMe drive is being located.
Blinking at 1 Hz	Blinking red at 1 Hz synchronously	Data on the NVMe secondary drive is being rebuilt.
Steady on/Off	Red steady on	The NVMe drive is faulty.

# 5.5.3 RAID Controller Card

The RAID controller card supports RAID configuration, RAID level migration, and drive roaming.

- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- For details about the RAID controller card, see the server RAID Controller Card User Guide.

# 5.6 Network

#### 5.6.1 OCP 3.0 NICs

OCP 3.0 NICs provide network expansion capabilities.

- The FlexIO slot supports an OCP 3.0 NIC, which can be configured as required.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- For details about OCP 3.0 NICs, see the OCP 3.0 NIC User Guide.

# 5.7 I/O Expansion

#### 5.7.1 PCle Module

PCIe cards provide ease of expandability and connection.

- The server supports a maximum of three standard PCIe expansion slots.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.
- When IB cards are used to build an IB network, ensure that the IPoIB modes of the IB cards at both ends of the network connection are the same. For details, contact technical support.

#### 5.7.2 PCIe Slots

#### **PCIe Slots**

Figure 5-16 PCIe slots




- I/O module 1 provides slots 1 and 2.
- I/O module 2 provides slot 3.

#### **PCle Riser Modules**


PCle riser module 1
 Provides PCle slots 1 and 2 in I/O module 1.

Figure 5-17 I/O module 1

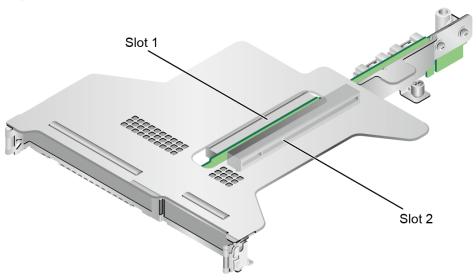

PCle riser module 2
 Provides PCle slot 3 in I/O module 2.

Figure 5-18 I/O module 2

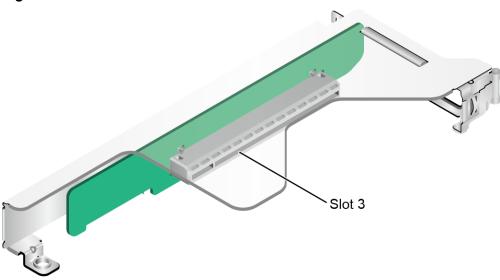

# **5.7.3 PCIe Slot Description**

#### **Server PCIe Slot Information**

#### □ NOTE

The PCIe port numbers in table 1 correspond to CPUs. For details about the PCIe port number displayed on the BIOS screen, see the Genoa platform BIOS parameter reference of the server.

PCIe Riser Modules	PCIe Riser Card Installatio n Position	PCIe Slots on the PCIe Riser Module	PCIe Slot or Interface Descriptio n	PCle Port Number	PCIe Devices Supported by the PCIe Slot or Interface
PCle riser module 1	I/O module 1	Slot 1	PCIe4.0 x16 <sup>a</sup> (x16) <sup>b</sup>	G0	FHHL
		Slot 2	PCIe 4.0 x16 (x16)	G1	HHHL
PCIe riser module 2	I/O module 2	Slot 3	PCIe 5.0 x16 (x16)	G3	HHHL
-	-	FlexIO card 1	PCle 4.0 x8 (x8)	G2A	OCP 3.0 specificatio ns
-	-	FlexIO card 2	PCIe 4.0 x8 (x8)	G2B	OCP 3.0 specifications

Table 5-17 PCle slot description

- a: **PCle 4.0** refers to the PCle of the fourth generation, and **x8** or **x16** refers to the physical slot width.
- b: The **x8** in brackets indicates that the link bandwidth is x8, and the **x16** in brackets indicates that the link bandwidth is x16.
- The FHHL PCIe slots are compatible with FHHL PCIe cards and HHHL PCIe cards.
- The maximum power supply of each PCle slot is 75 W.

#### Server Bus/Device/Function Number (B/D/F) Information

The server's B/D/F information may change with PCle card configurations. You can obtain the B/D/F information of the server using the following methods:

- SOL serial port information: If serial port information has been collected, search the keyword RootBusBDF or DeviceBDF in **systemcom.tar** file to query the B/D/F information of the server.
- The following describes how to obtain the B/D/F information on different OSs:
  - Linux OS: You can obtain the B/D/F information of the server using the Ispci-vvv command.
    - **◯** NOTE

If the OS does not support the **Ispci** command by default, obtain the **pci-utils** package from the **yum** source and install it to make the OS support the command.

 Windows OS: After installing the **pci-utils** package, run the **lspci** command to obtain the B/D/F information of the server. VMware OS: The **Ispci** command is supported by default. You can directly obtain the B/D/F information of the server using the **Ispci** command.

## 5.8 PSUs

- Supports one or two PSUs.
- Supports AC or DC PSUs.
- Supports hot swap.
- When two PSUs are configured, 1+1 redundancy is supported.
- PSUs of the same P/N code must be used in a server.
- Short-circuit protection is provided, and bipolar fuses are provided for PSUs that support dual live wire input.
- If the DC power supply is used, purchase the DC power supply that meets the requirements of the safety standards or the DC power supply that has passed the CCC certification.
- For details about the optional components, consult the local sales representative or see "Search Parts" in the compatibility list on the technical support website.

Figure 5-19 Positions of PSUs



# 5.9 Fan Modules

- Supports eight fan modules.
- Supports hot swap.
- Supports N+1 redundancy. The server runs properly when one fan fails.
- Supports intelligent fan speed adjustment.
- Fan modules of the same part number (P/N code) must be used in a server.


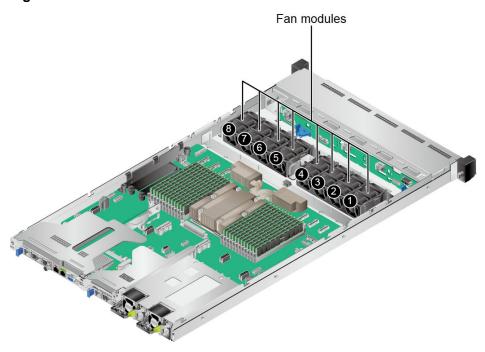


Figure 5-20 Positions of the fan modules

# 5.10 Board

# 5.10.1 Mainboard

Figure 5-21 Mainboard

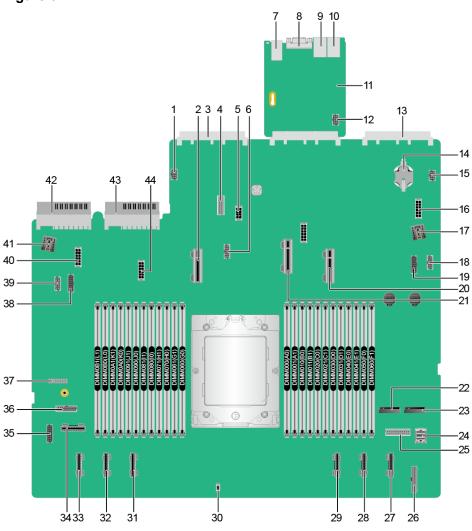

1	Leakage detection connector (LIQUIDCONN/ J17) <sup>a</sup>	2	UBC DD connector (UBCDD2-7/J8)
3	OCP 3.0 NIC connector (OCP2 CONN/J11701)	4	Mezzanine RAID controller card signal connector (RAID/J42) <sup>a</sup>
5	DPU power connector (DPUPWR1/J77)	6	NC-SI connector (NCSICONN/J6)
7	Rear USB 3.0 port (USB3.0 CONN/J88) b	8	Rear VGA port (VGA CONN/J60)
9	Serial port (COM/J6020)	10	Rear BMC management port (BMC_GE1/J6019)

11	BMC management board	12	Rear BMC management port signal connector <sup>a</sup> (BMC_GE2/J6026)
13	OCP 3.0 NIC connector (OCP1 CONN/J1)	14	Cell battery holder (J75)
15	Liquid-cooling flow regulating port (CTRLVALVE/J16) <sup>a</sup>	16	Rear I/O module 1 power connector (IO1 PWR/J25)
17	Fan board power connector (FAN PWR/J76)	18	Fan board signal connector (FAN BOARD/J15)
19	Front-drive backplane 2 signal connector (FRONT HDD BP2 /J123)	20	UBC DD connector (UBCDD1-7/J36)
21	UBC DD Connector (UBCDD1-8/J37)	22	M.2 SSD slot 1 <sup>c</sup>
23	M.2 SSD slot 2 <sup>c</sup>	24	Mini-SAS HD connector (MiniSAS_HD/J10901)
25	Left mounting ear connector (L_EARBOARD/ J39)	26	Right mounting ear connector (R_EARBOARD/ J74)
27	UBC connector (UBC1-2/J5)	28	UBC connector (UBC2-1/ J29)
29	UBC connector (UBC2-2/ J27)	30	Intrusion sensor connector (INTRUDER CONN/J11)
31	UBC connector (UBC2-3/ J31)	32	UBC connector (UBC2-4/ J30)
33	UBC connector (UBC1-3/J2)	34	UBC connector (UBC1-4/J3)
35	Front-drive backplane 1 signal connector (FRONT HDD BP1/J12)	36	Front-drive backplane 3 signal connector (FRONT HDD BP3/J122)
37	TPM/TCM connector (TPMCONN/J63)	38	Built-in drive backplane signal connector (INNER BP /J14) <sup>a</sup>
39	Rear I/O module 3 drive backplane signal connector (PSU HDD BP/J13) <sup>a</sup>	40	Rear I/O module 3 power connector (IO3 PWR/J20)
41	Front-drive backplane power connector <sup>a</sup> (FRONT HDD PWR/J110)	42	PSU 2 connector (PSU2/ J19)

J18) c	Built-in drive module power connector (INNER PWR/ J21) <sup>a</sup>
--------	---


- a: The reserved connector is temporarily unavailable.
- b: Two USB 3.0 ports.
- c: The CPU is directly managed and does not support RAID configuration.

# 5.10.2 Drive Backplane

# **Front-Drive Backplane**

10 x 2.5" drive pass-through backplane
 This backplane is used for 10 x 2.5" drive NVMe configuration 1 and 10 x 2.5" drive NVMe configuration 2 in 5.5.1.1 10 x 2.5" Drive NVMe Configuration.

Figure 5-22 10 x 2.5" drive pass-through backplane

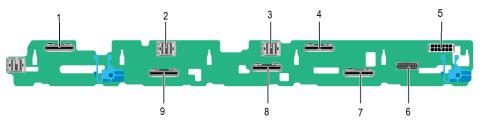


No.	Connector	Managed Drive Slot
1	UBC connector (UBC2CPU0 /J5)	Slots 8 and 9
2	Mini-SAS HD connector (PORT B/J7)	Slots 4 to 7
3	Mini-SAS HD connector (PORT A/J6)	Slots 0 to 3
4	UBC connector (UBC12CPU1 /J2)	Slots 2 and 3
5	Power connector (HDD POWER /J21)	-
6	Indicator signal cable connector (HDD_BP/ J20)	-
7	UBC connector (UBC11CPU1 /J1)	Slots 0 and 1

No.	Connector	Managed Drive Slot
8	UBC connector (UBC13CPU1 /J3)	Slots 4 and 5
9	UBC connector (UBC1CPU0 /J4)	Slots 6 and 7

#### • 10 x 2.5" drive pass-through backplane

This backplane is used for 10 x 2.5" drive pass-through configuration 1 (6 x SATA drives + 4 x NVMe drives) and 10 x 2.5" drive pass-through configuration 2 (6 x SAS/SATA drives + 4 x NVMe drives) in  $5.5.1.2 \pm 10 \times 2.5$ " Drive Pass-Through Configuration.


Figure 5-23 10 x 2.5" drive pass-through backplane

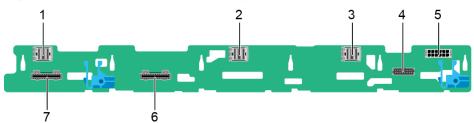

No.	Connector	Managed Drive Slot
1	Mini-SAS HD connector (PORT C/J8)	Slots 8 and 9
2	Mini-SAS HD connector (PORT B/J7)	Slots 4 to 7
3	Mini-SAS HD connector (PORT A/J6)	Slots 0 to 3
4	Backplane signal cable connector (HDD BP/ J20)	-
5	Power connector (HDD_POWER/J21)	-
6	UBC connector 1 (UBC1/J1)	Slots 6 and 7
7	UBC connector 2 (UBC2/J2)	Slots 8 and 9

# 5.10.3 Fan Board



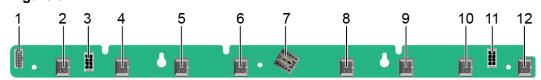

1	Fan board signal connector (FAN_BOARD/J3)	2	Fan connector (FAN8 / J1401)
3	-	4	Fan connector (FAN7 / J1301)
5	Fan connector (FAN6 / J1201)	6	Fan connector (FAN5 / J1101)
7	Fan board power connector (J1)	8	Fan connector (FAN4 / J1001)
9	Fan connector (FAN3 / J901)	10	Fan connector (FAN2 / J801)
11	-	12	Fan connector (FAN1 / J701)

# 6 Specifications

- 6.1 Technical Specifications
- 6.2 Environmental Specifications
- 6.3 Physical Specifications

# **6.1 Technical Specifications**

Table 6-1 Technical specifications

Component	Specifications
Form factor	1U rack server
Processor	Supports one processor.
	<ul> <li>4th-generation AMD EPYC<sup>®TM</sup> 9004 series processors (Genoa).</li> </ul>
	Built-in memory controller and 12 memory channels per processor
	Built-in PCle controller, supporting PCle 5.0 and 128 lanes per processor
	Up to 96 cores
	Max. 4.4 GHz turbo frequency
	Max. 384 MB L3 cache per CPU
	Max. 360 W thermal design power (TDP)
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.

Component	Specifications
Memory	24 memory slots.
	Up to 24 DDR5 DIMMs
	<ul> <li>RDIMM or RDIMM-3DS support</li> </ul>
	<ul> <li>– Max. 4800 MT/s memory speed</li> </ul>
	<ul> <li>DDR5 memory modules of different types (RDIMM and RDIMM-3DS) and specifications (capacity, bit width, rank, and height) cannot be used together.</li> </ul>
	<ul> <li>A server must use DDR5 DIMMs of the same P/N code.</li> </ul>
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.

Component	Specifications		
Storage	Supports a variety of drive configurations. For details, see 5.5.1 Drive Configuration and Drive Numbering.  • Supports two M.2 SSDs.		
	<ul> <li>Supports two CPU direct out SATA M.2 SSDs.</li> <li>RAID is not supported.</li> </ul>		
	NOTE		
	<ul> <li>The M.2 SSD is used only as a boot device for installing the OS. Small-capacity (32 GB or 64 GB) M. 2 SSDs do not support logging due to poor endurance. If a small-capacity M.2 SSD is used as the Boot device, a dedicated log drive or log server is required for logging. For example, you can dump VMware logs in either of the following ways:</li> </ul>		
	<ul> <li>Redirect /scratch. For details, see https:// kb.vmware.com/s/article/1033696.</li> </ul>		
	<ul> <li>Configure syslog. For details, see https:// kb.vmware.com/s/article/2003322.</li> </ul>		
	The M.2 SSD cannot be used to store service data due to poor endurance. In write-intensive applications, the M.2 SSD will wear out in a short time.  If you want to use SSDs or HDDs as data storage devices, use enterprise-level SSDs or HDDs with high DWPD.		
	<ul> <li>The M.2 SSD is not recommended for write-intensive service software due to poor endurance.</li> </ul>		
	<ul> <li>Do not use M.2 SSDs for cache.</li> </ul>		
	Supports hot swap of SAS/SATA/NVMe U.2 drives.		
	Support a variety of RAID controller cards. For details, see "Search Parts" in the Compatibility List on the support website.		
	<ul> <li>The RAID controller card supports RAID configuration, RAID level migration, and drive roaming.</li> </ul>		
	The RAID controller card supports a supercapacitor for power-off protection to ensure user data security.		
	<ul> <li>The PCIe RAID controller card occupies one PCIe slot.</li> </ul>		
	For details about the RAID controller card, see the server <i>RAID Controller Card User Guide</i> .		
	NOTE  If the BIOS is in legacy mode, the 4K drive cannot be used as the boot drive.		

Component	Specifications
Network	OCP 3.0 NICs provide network expansion capabilities.
	<ul> <li>Supports two OCP 3.0 NICs, which can be configured as required.</li> </ul>
	<ul> <li>Supports a variety of OCP 3.0 NICs. For details, see "Search Parts" in the compatibility list on the technical support website.</li> </ul>
I/O expansion	Supports five PCIe slots.
	Supports two FlexIO expansion slots dedicated for OCP 3.0 NICs and three standard PCIe expansion slots.
	For details, see 5.7.2 PCIe Slots and 5.7.3 PCIe Slot Description.
	NOTE The preceding information is for reference only. For details, see "Search Parts" in the compatibility list on the technical support website.
Ports	Supports a variety of ports.
	Ports on the front panel:
	One USB Type-C iBMC direct connect management port
	<ul><li>One USB 3.0 port</li></ul>
	Ports on the rear panel:
	- Two USB 3.0 ports
	<ul><li>One DB15 VGA port</li></ul>
	One RJ45 serial port
	One RJ45 management network port
	NOTE You are not advised to install the OS on the USB storage media.
Video card	An SM750 video chip with 32 MB display memory is integrated on the mainboard. The maximum display resolution is 1920 x 1200 at 60 Hz with 16M colors.
	NOTE  The integrated video card can provide the maximum display resolution (1920 x 1200) only after the video card driver matching the operating system version is installed. Otherwise, only the default resolution supported by the operating system is provided.
System management	• UEFI
	• iBMC
	NC-SI
	Integration with third-party management systems

Component	Specifications	
Security feature	Power-on password	
	Administrator password	
	TPM (for China and outside China)/TCM (only for China)	
	Secure boot	
	Front bezel (optional)	
	Chassis cover opening detection	

# **6.2 Environmental Specifications**

Table 6-2 Environmental specifications

Item	Specifications
Temperature	Operating temperature: 5°C to 40°C (41°F to 104°F)     (ASHRAE Classes A1 to A3 compliant)
	<ul> <li>Storage temperature (within three months): -30°C to +60°C (-22°F to +140°F)</li> </ul>
	<ul> <li>Storage temperature (within six months): -15°C to +45°C (5°F to 113°F)</li> </ul>
	<ul> <li>Storage temperature (within one year): -10°C to +35°C (14°F to 95°F)</li> </ul>
	<ul> <li>Maximum temperature change rate: 20°C (36°F) per hour and 5°C (9°F) per 15 minutes</li> </ul>
	NOTE The operating temperature limitation varies depending on the server configuration. For details, see A.3 Operating Temperature Limitations.
Relative humidity (RH,	Operating humidity: 8% to 90%
non-condensing)	Storage humidity (within three months): 8% to 85%
	Storage humidity (within six months): 8% to 80%
	Storage humidity (within one year): 20% to 75%
	Maximum change humidity rate: 20% per hour
	<ul> <li>Operational climatic range category 8% RH with -12°C (10.4°F) minimum dew point to 90% RH with 24°C (75.2°F) maximum dew point (ASHRAE Classes A3 compliant)</li> </ul>
Air volume	≥96CFM

Item	Specifications		
Operating altitude	≤ 3050 m (10,006.56 ft)		
	When the server configuration complies with ASHRAE Classes A1 and A2 and the altitude is above 900 m (2952.76 ft), the highest operating temperature decreases by 1°C (1.8°F) for every increase of 300 m (984.25 ft).		
	When the server configuration complies with ASHRAE Class A3 and the altitude is above 900 m (2952.76 ft), the highest operating temperature decreases by 1°C (1.8°F) for every increase of 175 m (574.15 ft).		
	HDDs cannot be used at an altitude of over 3050 m (10,006.56 ft).		
Corrosive airborne	Maximum growth rate of the corrosion product thickness:		
contaminants	Copper corrosion rate test: 300 Å/month (meeting level G1 requirements of the ANSI/ISA-71.04-2013 standard on gaseous corrosion)		
	Silver corrosion rate test: 200 Å/month		
Particle contaminant	Meets the requirements of ISO 14664-1 Class 8.		
	There is no explosive, conductive, magnetic, or corrosive dust in the equipment room.		
	NOTE  It is recommended that the particulate pollution in the equipment room be monitored by a professional agency.		
Acoustic noise	The declared A-weighted sound power levels (LWAd) and declared average bystander position A-weighted sound pressure levels (LpAm) listed are measured at 23°C (73.4°F) in accordance with ISO 7779 (ECMA 74) and declared in accordance with ISO 9296 (ECMA 109).		
	• Idle:		
	- LWAd: 5.75 Bels		
	– LpAm: 47.3 dBA		
	Operating:		
	- LWAd: 6.69 Bels		
	- LpAm: 56.0 dBA		
	NOTE  Actual sound levels generated during operation vary depending on the configuration, load, and ambient temperature.		

# **6.3 Physical Specifications**

Table 6-3 Physical specifications

Category	Description		
Dimensions (H x W x D)	2.5" drive chassis: 43 mm x 435.6 mm x 798 mm (1.69 in. x 17.15 in. x 31.42 in.)		
	Figure 6-1 Physical dimensions		
	Topic of the second sec		
	NOTE See Figure 6-1 for methods of measuring physical dimensions of the chassis.		
Installation space	<ul> <li>Requirements for cabinet installation:         Cabinet compliant with the International         Electrotechnical Commission (IEC) 297 standard         <ul> <li>Cabinet width: 482.6 mm (19.00 in.)</li> <li>Cabinet depth ≥ 1000 mm (39.37 in.)</li> </ul> </li> <li>Requirements for guide rail installation:         <ul> <li>L-shaped guide rails: apply only to xFusion cabinets.</li> <li>Friction slides: Friction slides apply to cabinets with a distance of 610 mm to 950 mm (24.02 in. to 37.40 in.) between the front and rear mounting bars.</li> <li>Ball bearing rail kit: applies to cabinets with a distance of 609 mm to 950 mm (23.98 in. to 37.40</li> </ul> </li> </ul>		
	in.) between the front and rear mounting bars.		
Weight in full configuration	<ul> <li>Net weight:     Maximum weight for server with 10 x 2.5" drives: 17.5 kg (38.58 lb)</li> <li>Packaging materials: 5 kg (11.03 lb)</li> </ul>		

Category	Description
Power consumption	The power consumption parameters vary with hardware configurations (including the configurations complying with EU ErP). For details, see Power Calculator on the technical support website.

# Software and Hardware Compatibility

7.1 Software and Hardware Compatibility

# 7.1 Software and Hardware Compatibility

For details about the OS and hardware, see the compatibility list on the technical support website.

#### **NOTICE**

- If incompatible components are used, the device may be abnormal. Such a fault is beyond the scope of technical support and warranty.
- The performance of servers is closely related to application software, basic middleware software, and hardware. The slight differences of the application software, middleware basic software, and hardware may cause performance inconsistency between the application layer and test software layer.
  - If the customer has requirements on the performance of specific application software, contact technical support to apply for proof of concept (POC) tests in the pre-sales phase to determine detailed software and hardware configurations.
  - If the customer has requirements on hardware performance consistency, specify the specific configuration requirements (for example, specific drive models, RAID controller cards, or firmware versions) in the presales phase.

# 8 Safety Instructions

8.1 Security

8.2 Maintenance and Warranty

# 8.1 Security

#### **General Statement**

- Comply with local laws and regulations when installing equipment. These safety instructions are only a supplement.
- Observe the safety instructions that accompany all "DANGER", "WARNING", and "CAUTION" symbols in this document.
- Observe all safety instructions provided on device labels.
- Operators of special types of work (such as electricians, operators of electric forklifts, and so on.) must be certified or authorized by the local government or authority.

# **MARNING**


In a household scenario, operation of this device may cause radio interference.

#### **Human Safety**

- This device is not suitable for use in places where children may be present.
- Only certified or authorized personnel are allowed to install equipment.
- Discontinue any dangerous operations and take protective measures. Report anything that could cause personal injury or device damage to a project supervisor.
- Do not move devices or install cabinets and power cables in hazardous weather conditions.
- Do not carry the weight that exceeds the maximum load per person allowed by local laws or regulations. Before moving a device, check the maximum device weight and arrange required personnel.

• Wear clean protective gloves, ESD clothing, a protective hat, and protective shoes, as shown in **Figure 8-1**.

Figure 8-1 Safety work wear

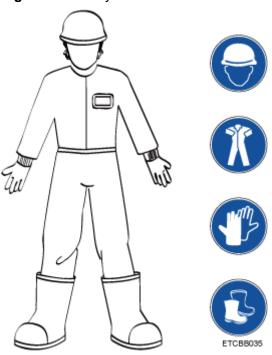

 Before touching a device, wear ESD clothing and gloves (or wrist strap), and remove any conductive objects (such as watches and jewelry). Figure 8-2 shows conductive objects that must be removed before you touch a device.


Figure 8-2 Removing conductive objects



Figure 8-3 shows how to wear an ESD wrist strap.

- a. Secure the ESD wrist strap around your wrist.
- b. Fasten the strap buckle and ensure that the ESD wrist strap is in contact with your skin.
- Insert the ground terminal attached to the ESD wrist strap into the jack on the grounded cabinet or chassis.

Figure 8-3 Wearing an ESD wrist strap

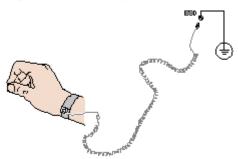

- Exercise caution when using tools that could cause personal injury.
- If the installation position of a device is higher than the shoulders of the
  installation personnel, use a vehicle such as a lift to facilitate installation. Prevent
  the device from falling down and causing personal injury or damage to the
  device.
- The equipment is powered by high-voltage power sources. Direct or indirect contact (especially through damp objects) with high-voltage power sources may result in serious injury or death.
- Ground a device before powering it on. Otherwise, high voltage leakage current may cause personal injury.
- When a ladder is used, ensure that another person holds the ladder steady to prevent accidents.
- Do not look into optical ports without eye protection when installing, testing, or replacing optical cables.

### **Equipment Safety**

- Use the recommended power cables at all times.
- Power cables are used only for dedicated servers. Do not use them for other devices.
- Before operating equipment, wear ESD clothes and gloves to prevent electrostatic-sensitive devices from being damaged by ESD.
- When moving a device, hold the bottom of the device. Do not hold the handles of the installed modules, such as the PSUs, fan modules, drives, and the mainboard. Handle the equipment with care.
- Exercise caution when using tools that could cause damage to devices.
- Connect the primary and secondary power cables to different power distribution units (PDUs) to ensure reliable system operation.
- Ground a device before powering it on. Otherwise, high voltage leakage current may cause device damage.

#### **Transportation Precautions**

Improper transportation may damage equipment. Contact the manufacturer for precautions before attempting transportation.

Transportation precautions include but are not limited to:

• The logistics company engaged to transport the device must be reliable and comply with international standards for transporting electronics. Ensure that the

equipment being transported is always kept upright. Take necessary precautions to prevent collisions, corrosion, package damage, damp conditions and pollution.

- Transport each device in its original packaging.
- If the original packaging is unavailable, package heavy, bulky parts (such as chassis and blades) and fragile parts (such as PCIe cards and optical modules) separately.

#### ■ NOTE

For details about components supported by the server, see "Search Parts" in the compatibility list on the technical support website.

Power off all devices before transportation.

### **Maximum Weight Carried by a Person**

# **CAUTION**

The maximum weight allowed to be carried by a single person is subject to local laws or regulations. The markings on the device and the descriptions in the documentation are for reference only.

**Table 8-1** lists the maximum weight one person is permitted to carry as stipulated by a number of organizations.

Table 8-1 Maximum weight carried per person

Organization	Weight (kg/lb)
European Committee for Standardization (CEN)	25/55.13
International Organization for Standardization (ISO)	25/55.13
National Institute for Occupational Safety and Health (NIOSH)	23/50.72
Health and Safety Executive (HSE)	25/55.13
General Administration of Quality Supervision, Inspection and Quarantine of the People's Republic of China (AQSIQ)	<ul><li>Male: 15/33.08</li><li>Female: 10/22.05</li></ul>

For more information about security instructions, see the server Safety Information.

# 8.2 Maintenance and Warranty

For details about maintenance, visit the **Technical Support Website** > **Service Support Center** > **Customer Support Service**.

For details about warranty, visit the **Technical Support Website** > **Service Support Center** > **Warranty**.

# 9 System Management

This product integrates the new-generation Intelligent Baseboard Management Controller (iBMC), which complies with Intelligent Platform Management Interface 2.0 (IPMI 2.0) specifications and provides reliable hardware monitoring and management.

The iBMC intelligent management system has the following features:

Various management interfaces

The iBMC provides the following standard interfaces to meet various system integration requirements:

- DCMI 1.5 interface
- IPMI 1.5/IPMI 2.0 interface
- Command-line interface (CLI)
- Redfish interface
- Hypertext Transfer Protocol Secure (HTTPS) interface
- Simple Network Management Protocol (SNMP) interface
- Fault monitoring and diagnosis

The iBMC detects hidden risks and ensures stable, uninterrupted 24/7 system operation by providing the following features:

- The iBMC allows screenshots and videos to be created when the system breaks down, facilitating cause analysis of the system breakdown.
- The iBMC offers screen snapshots and videos, simplifying routine preventive maintenance, recording, and auditing.
- The iBMC supports the reporting of alarms through syslog packets, trap packets, and emails, helping the upper-layer NMS to collect the fault information about the server.
- The LCD can directly obtain device information from the iBMC.
- Security management
  - The iBMC uses image mirroring to improve system security. Even if the running software breaks down, the system can start from the backup image.
  - Diversified user security control interfaces are provided to ensure user login security.

- The iBMC supports import and replacement of multiple types of certificates to ensure data transmission security.
- System maintenance interface
  - The iBMC supports keyboard, video, and mouse (KVM) and virtual media to facilitate remote maintenance.
  - The iBMC supports out-of-band monitoring and configuration of RAID, improving RAID configuration efficiency and management.
  - Smart Provisioning provides a convenient operation interface for installing the OS, configuring RAID, and performing the upgrade without a CD-ROM.
- Diversified network protocols
  - The iBMC supports the Network Time Protocol (NTP) to facilitate time settings and ensure time synchronization.
  - The iBMC supports domain management and directory services to simplify network management.
- Intelligent power management
  - The iBMC uses power capping to improve deployment density.
  - The iBMC uses dynamic power saving to reduce operational expenditure (OPEX).
- License management

By managing licenses, you can use the features of the iBMC advanced edition in authorization mode.

The advanced edition of the iBMC provides the following features:

- Deploy OS through the Redfish interface.
- Collect the original data of intelligent diagnosis using Redfish.

# 10 Certifications

Country/Region	Certification	Standard
Japan	VCCI	VCCI 32-1(Class A)
China	ccc	GB 17625.1-2022
		GB 4943.1-2022
		GB/T 9254.1-2021 (Class A)

# 1 1 Waste Product Recycling


If you have xFusion products at the end of their lifecycle and need xFusion's product recycling service, contact xFusion technical support.



# **A.1 Chassis Label Information**

Nameplate

# A.1.1 Chassis Head Label

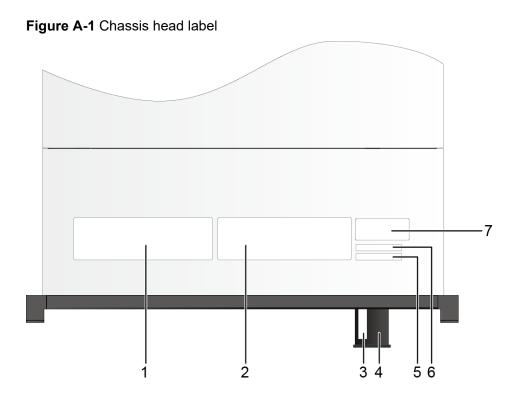

2

Label

Certificate and Quick Access

3	Product SN  NOTE  For details, see A.2 Product SN.	4	Slide-out label plate  NOTE  The location of the slide-out label plate varies depending on the server model or configuration. For details, see 5.1.1 Appearance.
5	Product SN  NOTE  For details, see A.2 Product SN.	6	Reserved space for the customized label
7	Pressure-proof label  NOTE  This label warns users not to place any objects on top of a rackmounted device.	-	-

# A.1.1.1 Nameplate

Figure A-2 Nameplate example

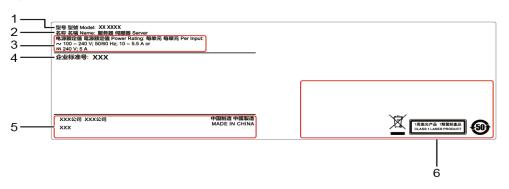


Table A-1 Nameplate description

No.	Description
1	Server model
	NOTE For details, see A.4 Nameplate.
2	Device name
3	Power supply requirements
4	Enterprise standard number
5	Vendor information
6	Certification marks

#### A.1.1.2 Certificate and Quick Access Label

Figure A-3 Samples of the certificate and quick access label



**Table A-2** Certificate description

No.	Description
1	Order
2	No. NOTE
	For details, see Figure A-3 and Table A-3.
3	QC inspector
4	Production date
5	No. barcode
6	Technical support website
7	QR code
	NOTE Scan the QR code to obtain technical support resources.
8	Default BIOS password
9	Default BMC Password
10	Default BMC User Name
11	BMC management network port subnet mask
12	BMC management network port IP address

Figure A-4 Certificate number example

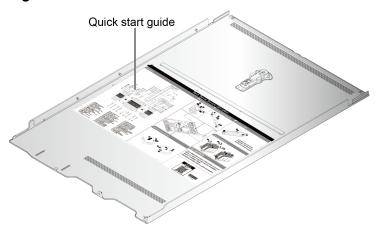


Table A-3 Certificate number description

No.	Description
1	P: a fixed value for this digit
2	Z: a fixed value for this digit
3	Y: a server
	B: a semi-finished server
	N: a spare part
4	0: a value for the reserved digit
5	Year (two characters)
6	Month (one character)
	Digits 1 to 9 indicate January to September respectively.
	Letters A to C indicate October to December respectively.
7	Day (one character)
	Digits 1 to 9 indicate the 1st to 9th.
	Letters A to H indicate the 10th to 17th.
	Letters J to N indicate the 18th to 22nd.
	Letters P to Y indicate the 23rd to 31st.
8	Hour (one character)
	Digits 0 to 9 indicate 0:00 to 9:00.
	Letters A to H indicate 10:00 to 17:00.
	Letters J to N indicate 18:00 to 22:00.
	Letters P to Q indicate 23:00 to 24:00.

# A.1.2 Chassis Internal Label

Figure A-5 Chassis internal label




#### **◯** NOTE

- The quick start guide is located on the inside of the chassis cover. It describes how to remove the mainboard components, important components of the chassis, precautions, and QR codes of technical resources. The pictures are for reference only. For details, see the actual product.
- The quick start guide is optional. For details, see the actual product.

## A.1.3 Chassis Tail Label

Figure A-6 Chassis tail label

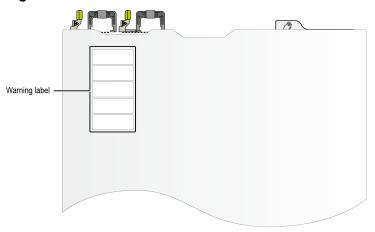

**◯** NOTE

For details about the warning label, see the server Safety Information.

# **A.2 Product SN**

The serial number (SN) on the label plate uniquely identifies a server. The SN is required when users contact xFusion technical support. SNs can be in three forms, as shown in SN Sample 1, SN Sample 2, and SN Sample 3.

SN example 1

Figure A-7 SN example 1

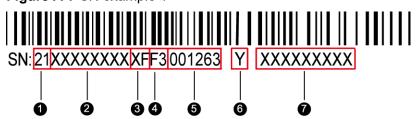


Table A-4 SN description

No.	Description
1	SN ID (two characters), which is <b>21</b> .

No.	Description		
2	Material identification code (eight characters), that is, the processing code.		
3	Vendor code (two characters), that is, the code of the processing place.		
4	<ul> <li>Year and month (two characters)</li> <li>The first character indicates the year.</li> <li>Digits 1 to 9 indicate years 2001 to 2009 respectively.</li> <li>Letters A to H indicate years 2010 to 2017 respectively.</li> <li>Letters J to N indicate years 2018 to 2022 respectively.</li> <li>Letters P to Y indicate years 2023 to 2032 respectively.</li> <li>NOTE  The years from 2010 are represented by upper-case letters excluding I, O, and Z because the three letters are similar to the digits 1, 0, and 2.</li> <li>The second character indicates the month.</li> <li>Digits 1 to 9 indicate January to September respectively.</li> <li>Letters A to C indicate October to December respectively.</li> </ul>		
5	Serial number (six characters)		
6	RoHS compliance status (one character). <b>Y</b> indicates RoHS compliant.		
7	Internal model, that is, product name.		

#### • SN example 2

Figure A-8 SN example 2

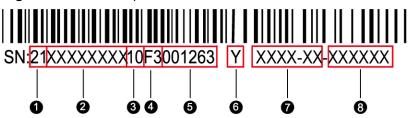


Table A-5 SN example 2

No.	Description
1	SN ID (two characters), which is <b>21</b> .
2	Material identification code (eight characters), that is, the processing code.

No.	Description		
3	Vendor code (two characters), that is, the code of the processing place.		
4	Year and month (two characters)		
	The first character indicates the year.		
	<ul> <li>Digits 1 to 9 indicate years 2001 to 2009 respectively.</li> </ul>		
	<ul> <li>Letters A to H indicate years 2010 to 2017 respectively.</li> </ul>		
	<ul> <li>Letters J to N indicate years 2018 to 2022 respectively.</li> </ul>		
	<ul> <li>Letters P to Y indicate years 2023 to 2032 respectively.</li> </ul>		
	NOTE  The years from 2010 are represented by upper-case letters excluding I, O, and Z because the three letters are similar to the digits 1, 0, and 2.		
	The second character indicates the month.		
	<ul> <li>Digits 1 to 9 indicate January to September respectively.</li> </ul>		
	<ul> <li>Letters A to C indicate October to December respectively.</li> </ul>		
5	Serial number (six characters)		
6	RoHS compliance status (one character). <b>Y</b> indicates RoHS compliant.		
7	Nameplate (six characters).		
8	Serial number. The number of digits depends on the actual product.		

#### • SN example 3

Figure A-9 Label example

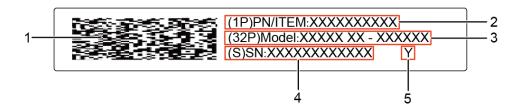


Table A-6 Label example description

No.	Description	
1	QR code. For details, see Figure A-11.	
2	BOM code (10 digits).	
3	Product model (13 characters).	

No.	Description	
4	Product SN (12 characters). For details, see <b>Table A-7</b> .	
5	RoHS compliance code (one character).	

Figure A-10 SN example

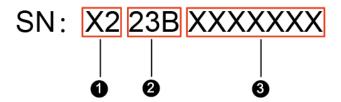


Table A-7 SN description

No.	Description
1	Manufacturer code (two characters).
2	Year and month (three characters).
	The first and second characters indicate the year.
	NOTE  A four-digit year is indicated by the last two digits of the year. For example, 23 indicates the year 2023.
	The third character indicates the month.
	Digits 1 to 9 indicate January to September respectively.
	Letters A to C indicate October to December respectively.
3	Serial number (seven characters).

Figure A-11 QR code scanning result example

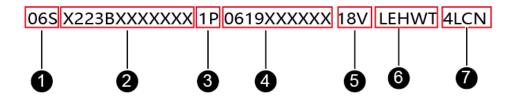


Table A-8 QR code scanning result example description

No.	Description	
1	Fixed representation symbol (three characters).	

No.	Description
2	Product SN (12 characters). For details, see <b>Table A-7</b> .
3	Data identifier for the material code (two characters).
4	BOM code (10 digits).
5	Data identifier of manufacturer (three characters).
6	Code of device manufacturer (five characters).
7	Data identifier of origin (four characters).

## **A.3 Operating Temperature Limitations**

**Table A-9** Operating temperature limitations

Configuration	Maximum Operating Temperature 30°C (86°F)	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F)
10 x 2.5" drive pass-through configuration 1	All configurations supported	All configurations supported	CPUs with TDP greater than 250 W are not supported.
			PCle NICs with 100 GE ports or ports of higher rate are not supported.
			100 GE OCP     3.0 NICs and OCP 3.0 NICs of higher rate are not supported.

Configuration	Maximum Operating Temperature 30°C (86°F)	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F)
10 x 2.5" drive pass-through configuration 2	All configurations supported	All configurations supported	<ul> <li>CPUs with TDP greater than 250 W are not supported.</li> <li>PCIe NICs with 100 GE ports or ports of higher rate are not supported.</li> <li>100 GE OCP 3.0 NICs and OCP 3.0 NICs of higher rate are not supported.</li> </ul>
10 x 2.5" drive pass-through configuration 1 (4 x NVMe drives)	All configurations supported	All configurations supported	<ul> <li>CPUs with TDP greater than 250 W are not supported.</li> <li>PCIe NICs with 100 GE ports or ports of higher rate are not supported.</li> <li>100 GE OCP 3.0 NICs and OCP 3.0 NICs of higher rate are not supported.</li> </ul>

Configuration	Maximum Operating Temperature 30°C (86°F)	Maximum Operating Temperature 35°C (95°F)	Maximum Operating Temperature 40°C (104°F)
10 x 2.5" drive pass-through configuration 2 (4 x NVMe drives)	All configurations supported	All configurations supported	CPUs with TDP greater than 250 W are not supported.
			PCle NICs with 100 GE ports or ports of higher rate are not supported.
			100 GE OCP     3.0 NICs and OCP 3.0 NICs of higher rate are not supported.

#### **◯** NOTE

- When a single fan is faulty, the highest operating temperature is 5°C (41°F) lower than the rated value.
- When a single fan is faulty, the system performance may be affected.
- It is recommended that servers be deployed at an interval of 1U to reduce server noise and improve server energy efficiency.
- Liquid-cooled processors are not supported.

## A.4 Nameplate

Certified Model	Remarks
1158H V7	Global

#### A.5 RAS Features

The server supports a variety of Reliability, Availability, and Serviceability (RAS) features. You can configure these features for better performance.

For details about RAS features, see the *Genoa Platform Server RAS Technical White Paper*.

## A.6 Sensor List

Sensor	Description	Component
Inlet Temp	Air inlet temperature	Indicator board
Outlet Temp	Air outlet temperature	BMC card
1711 Core Temp	Core temperature of the 1711 chip	BMC card
SSD Max Temp	Maximum SSD temperature (reported by BMA)	SSD
SSD\$ Temp	SSD card temperature	SSD
CPU Power	Power consumption of CPU 1 in the power-on state	CPU
CPU Usage	CPU usage	CPU
CPU1 12V	12 V voltage that the mainboard supplies to CPU1	CPU
CPU1 VDD11 S3	PSU voltage of CPU1 DRAM IO port	CPU
CPU1 VDDIO	Power supply voltage of CPU1 DRAM IO port	CPU
CPU1 VDDCR SOC	Power supply voltage of CPU1 FCH/Ethernet/ SATA, NBIO, SMU, and DDR	CPU
CPU1 VDDCR0	Core voltage on the notched side at the top of CPU1	CPU
CPU1 VDDCR1	Core voltage on the other notched side at the top of CPU1	CPU
CPU1 Core Temp	CPU core temperature	CPU
CPU1 MEM Temp	Temperature of DIMMs mapping to a CPU	CPU
CPU1 Memory	Memory module status	CPU
CPU1 Prochot	CPU Prochot	CPU
CPU1 Status	CPU status detection	CPU

Sensor	Description	Component
CPU1 VRD Temp	CPU VRD temperature	CPU
PS\$ VIN	Single PSU input voltage	PSU
PS\$ IIn	PSU input current	PSU
PS\$ IOut	Single PSU output current	PSU
PS\$ POut	Single PSU output power	PSU
PS\$ Temp	Maximum internal temperature of the PSU	PSU
PS\$ Inlet Temp	PSU air inlet temperature	PSU
PS\$ Status	Single PSU fault status	PSU
PS\$ Fan Status	PSU fan fault status	PSU
PS Redundancy	Redundancy failure due to PSU removal	PSU
Disks Temp	Maximum drive temperature	Drive
Power\$	PSU input power	PSU \$ \$ indicates the PSU number which is 1 or 2.
FAN Power	Total memory power consumption when the server is powered on (available only for custom model)	Fan module
FAN N F Speed	Fan speed	Fan module <i>N</i>
FAN NR Speed		N indicates the fan module ID. The value ranges from <b>1</b> to <b>8</b> .
FAN N Status	Fan fault status	Fan module <i>N</i>
		N indicates the fan ID. The value ranges from 1 to 8.
FAN N Presence	Fan presence	Fan module N
		N indicates the fan ID. The value ranges from <b>1</b> to <b>8</b> .
DIMMN	DIMM status	DIMM N
		N indicates the DIMM slot number.

Sensor	Description	Component
RTC Battery	RTC battery status. An alarm is generated when the voltage is lower than 1 V.	RTC battery on the mainboard
Power Button	Power button pressed status	Mainboard and power button
Watchdog2	Watchdog	Mainboard
Mngmnt Health	Management subsystem health status	Management module
UID Button	UID button status	Mainboard
PwrOk Sig. Drop	Voltage dip status	Mainboard
PwrOn TimeOut	Power-on timeout	Mainboard
HDD BP Status	Drive backplane health status	Drive backplane
RiserN 12V	12 V voltage supplied by the mainboard to the riser card	Mainboard  N indicates the riser card slot number. The value is 1 or 2.
Riser\$ Temp	Riser card temperature	Riser card
Raid\$ BBU Temp	Temperature of the RAID controller card backup PSUs	RAID controller card
DISK\$	Drive status	Drive
Disks Temp	Maximum drive temperature	Drive
Disk BP\$ Temp	Drive backplane temperature	Drive backplane
PCIE Status	PCIe status error	PCle card
PCIe\$ OP Temp	PCle card optical module temperature	PCle card
PCIe\$ Temp	PCle card chip temperature	PCle card
PCIe RAID\$ Temp	Temperature of the PCIe RAID controller card	PCIe RAID controller card
PCIe\$ Card BBU	BBU status of the PCIe RAID controller card	PCIe RAID controller card

Sensor	Description	Component
PCIe NIC\$ Temp	PCle card chip temperature	PCle card
PCIe FC\$ Temp	PCle card chip temperature	PCle card
PCIe\$ Cpu Temp	CPU temperature of the SDI card	SDI card
PCIe\$ Inlet Temp	Air inlet temperature of the SDI card	SDI card
IB\$ Temp	IB NIC temperature	IB card
M2 Temp(PCIe\$)	M.2 drive temperature	M.2 drive
M2Disk1	Status of the M.2 drive on the riser card	M.2 riser card
M2Disk2	Status of the M.2 drive on the riser card	M.2 riser card
AreaIntrusion	Listening to the unpacking action	Mainboard
OCP\$ OP Temp	OCP card optical module temperature	OCP 3.0 NIC
OCP\$ Temp	OCP card chip temperature	OCP 3.0 NIC
OAMPort1_\$ Link	The OAM link of the network port is abnormal.	OCP 3.0 NIC
OAMPort2_\$ Link	The OAM link of the network port is abnormal.	OCP 3.0 NIC
SSD Disk\$ Temp	SSD temperature	SSD
EXP\$ Temp	EXP chip temperature	Drive backplane
GPU\$ Power	GPU power	GPU
GPU\$ Temp	GPU temperature	GPU
GPU\$ HBM Temp	HBM chip temperature of the GPU	GPU
P4GPU\$ Temp	GPU temperature	GPU
System Notice	Hot restart reminder and fault diagnosis program information collection	N/A
System Error	System suspension or restart. Check the background logs.	

Sensor	Description	Component
ACPI State	ACPI status	
SysFWProgress	Software processes and system startup errors	
SysRestart	System restart causes	
Boot Error	Boot error	
CPU Usage	CPU usage	
Memory Usage	Memory usage	
MEM Power	Total memory power consumption when the server is powered on (available only for custom model)	
BMC Boot Up	BMC startup event	
Boot Error	Boot error	
BMC Time Hopping	Time hopping	
NTP Sync Failed	NTP synchronization failure and recovery events	
SEL Status	SEL full or events being cleared	
Critical INT	PCle bus error status	
FPGA\$ DDR Temp	FPGA card memory temperature	
FPGA\$ OP Temp	FPGA card optical module temperature	
FPGA\$ Power	GPU power	
ProductID Status	Product identification status	

## B Glossary

#### **B.1 A-E**

В

	<b>T</b>
ВМС	The baseboard management controller (BMC) complies with the Intelligent Platform Management Interface (IPMI). It collects, processes, and stores sensor signals, and monitors the operating status of components. The BMC provides the hardware status and alarm information about the managed objects to the management system so that the management system can implement unified management of the devices.

Ε

ejector lever	A part on the panel of a device used to facilitate installation or removal of the device.
Ethernet	A baseband local area network (LAN) architecture developed by Xerox Corporation by partnering with Intel and DEC. Ethernet uses the Carrier Sense Multiple Access/Collision Detection (CSMA/CD) access method and allows data transfer over various cables at 10 Mbit/s. The Ethernet specification is the basis for the IEEE 802.3 standard.

## **B.2 F-J**

G

Gigabit Ethernet (GE)	An extension and enhancement of traditional shared media Ethernet standards. It is compatible with 10 Mbit/s and 100 Mbit/s Ethernet and complies with IEEE 802.3z
	standards.

Н

-	Replacing or adding components without stopping or
	shutting down the system.

## **B.3 K-O**

Κ

A hardware device that provides public keyboard, video
and mouse (KVM).

## **B.4 P-T**

Ρ

panel	An external component (including but not limited to ejector levers, indicators, and ports) on the front or rear of the server. It seals the front and rear of the chassis to ensure optimal ventilation and electromagnetic compatibility (EMC).
Peripheral Component Interconnect Express (PCIe)	A computer bus PCI, which uses the existing PCI programming concepts and communication standards, but builds a faster serial communication system. Intel is the main sponsor for PCIe. PCIe is used only for internal interconnection. A PCI system can be transformed to a PCIe system by modifying the physical layer instead of software. PCIe delivers a faster speed and can replace almost all AGP and PCI buses.

#### R

redundancy	A mechanism that allows a backup device to automatically take over services from a faulty device to ensure uninterrupted running of the system.
redundant array of independent disks (RAID)	A storage technology that combines multiple physical drives into a logical unit for the purposes of data redundancy and performance improvement.

S

server	A special computer that provides services for clients over a network.
Standby 12V Out (SV12)	Standby 12V output of the PSU.
system event log (SEL)	Event records stored in the system used for subsequent fault diagnosis and system recovery.

## **B.5 U-Z (AMD)**

U

UBC	Union Bus Connector
UBC DD	Union Bus Connector Double Density
UDIMM	unbuffered dual in-line memory module
UEFI	Unified Extensible Firmware Interface
UID	unit identification light
UL	Underwriter Laboratories Inc.
UPI	UltraPath Interconnect
USB	Universal Serial Bus

V

VCCI	Voluntary Control Council for Interference by Information Technology Equipment
VGA	Video Graphics Array
VLAN	virtual local area network

VRD	voltage regulator-down
-----	------------------------

#### W

WEEE	waste electrical and electronic equipment
WSMAN	Web Service Management

# C Acronyms and Abbreviations

#### **C.1 A-E**

Α

AC	alternating current
AES	Advanced Encryption Standard New Instruction Set
ARP	Address Resolution Protocol
AVX	Advanced Vector Extensions

В

BBU	backup battery unit
BIOS	Basic Input/Output System
вмс	baseboard management controller

C

ccc	China Compulsory Certification
CD	calendar day
CE	Conformite Europeenne
CIM	Common Information Model
CLI	command-line interface

D

DC	direct current
DDR5	Double Data Rate 5
DDDC	double device data correction
DEMT	Dynamic Energy Management Technology
DIMM	dual in-line memory module
DRAM	dynamic random-access memory
DVD	digital video disc

Ε

ECC	error checking and correcting
ECMA	European Computer Manufacturer Association
EDB	Execute Disable Bit
EID	enclosure ID
EN	European Efficiency
ERP	enterprise resource planning
ETS	European Telecommunication Standards

## C.2 F-J

F

FB-DIMM	Fully Buffered DIMM
FC	Fiber Channel
FCC	Federal Communications Commission
FCoE	Fibre Channel over Ethernet
FTP	File Transfer Protocol

G

GE	Gigabit Ethernet
----	------------------

GPIO	General Purpose Input/Output
GPU	graphics processing unit

#### Н

НА	high availability
нвм	high bandwidth memory
HDD	hard disk drive
HPC	high-performance computing
НТТР	Hypertext Transfer Protocol
HTTPS	Hypertext Transfer Protocol Secure

I

іВМС	intelligent baseboard management controller
IC	Industry Canada
ICMP	Internet Control Message Protocol
IDC	Internet Data Center
IEC	International Electrotechnical Commission
IEEE	Institute of Electrical and Electronics Engineers
IGMP	Internet Group Message Protocol
IOPS	input/output operations per second
IP	Internet Protocol
IPC	Intelligent Power Capability
ІРМВ	Intelligent Platform Management Bus
IPMI	Intelligent Platform Management Interface

## C.3 K-O

#### Κ

KVM keyboard, video, and mouse
--------------------------------

L

LC	Lucent Connector
LRDIMM	load-reduced dual in-line memory module
LED	light emitting diode
LOM	LAN on motherboard

M

MAC	media access control
ммс	module management controller

Ν

NBD	next business day
NC-SI	Network Controller Sideband Interface

0

## **C.4 P-T**

Ρ

PCle	Peripheral Component Interconnect Express
PDU	power distribution unit
PHY	physical layer
PMBUS	power management bus
РОК	Power OK
PWM	pulse-width modulation
PXE	Preboot Execution Environment

#### R

RAID	redundant array of independent disks
RAS	reliability, availability and serviceability
RDIMM	registered dual in-line memory module
REACH	Registration Evaluation and Authorization of Chemicals
RJ45	registered jack 45
RoHS	Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment

S

SAS	Serial Attached Small Computer System Interface
SATA	Serial Advanced Technology Attachment
SCM	supply chain management
SDDC	single device data correction
SERDES	serializer/deserializer
SGMII	serial gigabit media independent interface
SMI	serial management interface
SMTP	Simple Mail Transfer Protocol
SNMP	Simple Network Management Protocol
SOL	serial over LAN
SONCAP	Standards Organization of Nigeria-Conformity Assessment Program
SSD	solid-state drive
SSE	Streaming SIMD Extension

T

TACH	tachometer signal
ТВТ	Turbo Boost Technology
TCG	Trusted Computing Group
TCM	trusted cryptography module
тсо	total cost of ownership

TDP	thermal design power
TELNET	Telecommunication Network Protocol
TET	Trusted Execution Technology
TFM	TransFlash module
TFTP	Trivial File Transfer Protocol
TOE	TCP offload engine
ТРМ	trusted platform module

## **C.5 U-Z (AMD)**

U

UBC	Union Bus Connector
UBC DD	Union Bus Connector Double Density
UDIMM	unbuffered dual in-line memory module
UEFI	Unified Extensible Firmware Interface
UID	unit identification light
UL	Underwriter Laboratories Inc.
UPI	UltraPath Interconnect
USB	Universal Serial Bus

۷

VCCI	Voluntary Control Council for Interference by Information Technology Equipment
VGA	Video Graphics Array
VLAN	virtual local area network
VRD	voltage regulator-down

W

WEEE	waste electrical and electronic equipment
WSMAN	Web Service Management